YR

ROTARY SCREW LIQUID CHILLER

INSTALLATION, COMMISSIONING, OPERATION AND MAINTENANCE

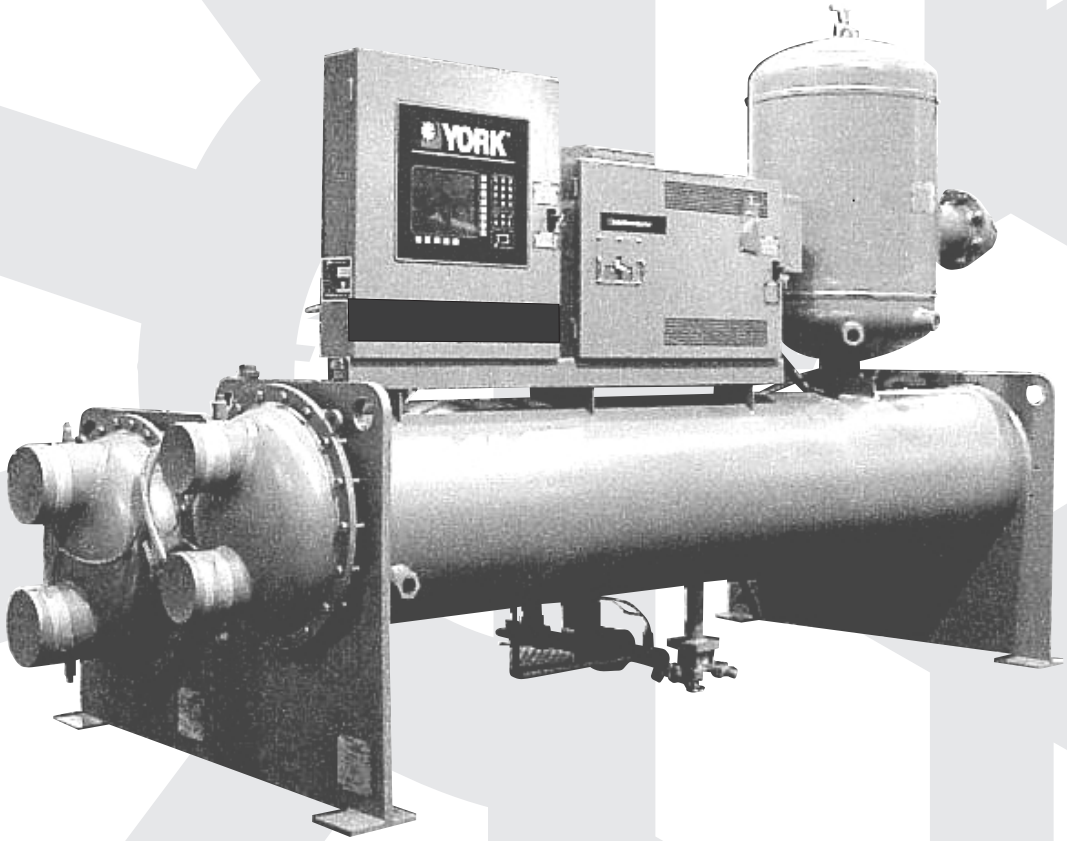

STYLE: **A**

REFRIGERANT: **R134a**

CE

YORK®

INTERNATIONAL

160.81-ICOM-GB0 (01/02)

GB

Table of Contents

1 SUPPLIER INFORMATION

1.1 Introduction 1.1
1.2 Warranty 1.1
1.3 Safety 1.1
1.4 Responsibility for Safety 1.1
1.5 About this Manual 1.2
1.6 Misuse of Equipment 1.2
1.7 Emergency Shutdown 1.3
1.8 Safety Labels 1.3
1.9 Material Safety Data 1.4

2 Product Description

2.1 General 2.1
2.2 Compressor 2.1
2.3 Motor 2.2
2.4 Lubrication 2.2
2.5 Oil Separator 2.2
2.6 Oil Filter 2.3
2.7 Oil Eductor Circuit 2.3
2.8 Heat Exchangers 2.3
2.9 Evaporator 2.4
2.10 Condenser 2.4
2.11 Refrigerant Flow Control 2.4
2.12 Capacity Control 2.4
2.13 Water Boxes 2.4
2.14 Control Panel 2.4
2.15 Options and Accessories 2.5
2.16 Nomenclature 2.6

3 TRANSPORTATION, RIGGING AND STORAGE

3.1 General 3.1
3.2 Shipment 3.1
3.3 Inspection, Damage and Shortage 3.2
3.4 Rigging 3.3

4 INSTALLATION

4.1 Location 4.1
4.2 Foundation 4.1
4.3 Clearances 4.1
4.4 Rigging Unit to Final Location 4.1
4.5 Locating and Installing Isolator Pads 4.1
4.6 Installing Optional Spring Isolators 4.2
4.7 Piping Connections 4.2
4.8 Evaporator and Condenser Water Piping 4.3
4.9 Water Treatment 4.3
4.10 Glycol Solutions 4.4
4.11 Condenser Water Circuit 4.4
4.12 Stop Valves 4.4
4.13 Flow Switches 4.4
4.14 Drain and Vent Valves 4.4
4.15 Checking Piping Circuits and Venting Air 4.4
4.16 Refrigerant Relief Piping 4.4
4.17 Unit Piping 4.5
4.18 Electrical Connection 4.5
4.19 Power Wiring 4.5
4.19.1 Units with Electro-Mechanical Starter
4.19.2 Units with Solid State Starter
4.20 Control Connections 4.7
4.20.1 Remote Start / Stop
4.20.2 Remote / Local Cycling
4.20.3 Chilled Liquid Flow Interlock
4.20.4 Cooling Liquid Flow Interlock (Optional)
4.20.5 Multi Unit Sequence
4.20.6 Auxiliary Safety Shutdown
4.20.7 Remote Leaving Chilled Water Temperature Setpoint Reset - PWM
4.20.8 Remote Current Limit Setpoint - PWM
4.20.9 Remote Leaving Chilled Water Temperature Setpoint Reset - Analogue
4.20.10 Remote Current Limit Setpoint - Analogue

4.21 Status Connections 4.8

4.21.1 Remote Mode - Ready to Start
4.21.2 Run Contacts
4.21.3 Anticipatory Alarm
4.21.4 Cycling Shutdown
4.21.5 Safety Shutdown

4.22 Pump Control Connections 4.9

4.22.1 Chilled Liquid Pump
4.22.2 Cooling Liquid Pump

4.23 Thermal Insulation 4.9

4.24 Installation Check 4.9

5 COMMISSIONING

5.1 Preparation 5.1

5.2 First Time Start-up 5.2

6 OPERATION

6.1 General 6.1

6.2 Pre-Startup 6.1

6.3 Start-up 6.1

6.4 Normal Operation 6.2

6.5 Shutdown 6.2

6.6 Manual Shutdown 6.2

6.7 Prolonged Shutdowns 6.3

6.8 Operating Inspections 6.3

6.9 Operating Log Sheet 6.4

6.10 Maintenance and Service 6.4

6.10.1 Normal and Safety System Shutdowns

7 MAINTENANCE

7.1 Scheduled Maintenance 7.1

7.1.1 Check the oil and refrigerant levels - Weekly

7.2 Special Maintenance Requirements 7.2

7.3 Regular Maintenance Operations 7.3

7.4 Oil Filters and Driers 7.4

7.4.1 Single Oil Filter Replacement
7.4.2 Dual Oil Filters
7.4.3 Filter Drier Replacement

7.5 Oil Charging 7.5

7.5.1 Oil charging procedure

7.6 Refrigerant Charge 7.5

7.6.1 Checking The Refrigerant Charge
7.6.2 Leak Testing
7.6.3 Vacuum Testing
7.6.4 Refrigerant Charging

7.7 Evaporator and Condenser 7.6

7.7.1 Chemical Water Treatment
7.7.2 Tube Cleaning
7.7.3 Tube Cleaning Procedures
7.7.4 Tube Leaks
7.7.5 In-Service Inspection

7.8 Electrical Controls 7.8

7.9 Testing Motor Winding Insulation 7.9

8 TROUBLE SHOOTING

8.1 General Requirements 8.1

8.2 Trouble Shooting 8.1

9 TECHNICAL DATA

9.1 Dimensions 9.1

9.2 Solid State Starter Details 9.2

9.3 Weights 9.2

9.4 Process and Instrumentation Diagram 9.3

9.5 Water Box Nozzle Arrangements 9.4

10 SPARE PARTS

11 DE-COMMISSIONING, DISMANTLING AND DISPOSAL

11.1 General 11.1

1 SUPPLIER INFORMATION

1.1 Introduction

York YR chillers are manufactured to the highest design and construction standards to ensure high performance, reliability and adaptability to all types of air conditioning installations.

The units are intended for cooling water or glycol solutions and are not suitable for purposes other than those specified in this manual.

This manual and the OptiView Control Panel Operating Instructions contain all the information required for correct installation and commissioning of the unit, together with operating and maintenance instructions. The manuals should be read thoroughly before attempting to operate or service the unit.

All procedures detailed in the manuals, including installation, commissioning and maintenance tasks must only be performed by suitably trained and qualified personnel.

The manufacturer will not be liable for any injury or damage caused by incorrect installation, commissioning, operation or maintenance resulting from a failure to follow the procedures and instructions detailed in the manuals.

1.2 Warranty

York International warrants all equipment and materials against defects in workmanship and materials for one year from initial start-up, or eighteen months from delivery (whichever occurs first) unless extended warranty has been agreed as part of the contract.

The warranty is limited to free replacement and shipping of any faulty part, or sub-assembly which has failed due to poor quality or manufacturing errors. All claims must be supported by evidence that the failure has occurred within the warranty period, and that the unit has been operated within the designed parameters specified.

All warranty claims must specify the unit model, serial number and order number.

The unit warranty will be void if any modification to the unit is carried out without prior written approval from York International.

For warranty purposes, the following conditions must be satisfied:

The initial start of the unit must be carried out by trained personnel from an Authorised York Service Centre.

Only genuine York approved spare parts, oils and refrigerants must be used.

All the scheduled maintenance operations detailed in this manual must be performed at the specified times by suitably trained and qualified personnel.

Failure to satisfy any of these conditions will automatically void the warranty.

1.3 Safety

Standards for Safety

YR chillers are designed and built within an EN ISO 9001 accredited design and manufacturing organisation and, within the limits specified in this manual, are in conformity with the essential health and safety requirements of the following European Union Directives:

Machinery Directive (89/392/EEC)

Low Voltage Directive (73/23/EEC, EN 60204)

EMC Directive (89/336/EEC)

PED 97/23/EC (Vessels only)

1.4 Responsibility for Safety

Every care has been taken in the design and manufacture of the units to ensure that they meet the safety requirements listed in the previous paragraph. However, the individual operating or working on any machinery is primarily responsible for:

Personal safety, safety of other personnel, and the machinery.

Correct utilisation of the machinery in accordance with the procedures detailed in the manuals.

1.5 About this Manual

The following symbols are used in this document to alert the reader to areas of potential hazard.

A Warning is given in this document to identify a hazard which could lead to personal injury. Usually an instruction will be given, together with a brief explanation and the possible result of ignoring the instruction.

A **Caution** identifies a hazard which could lead to damage to the machine, damage to other equipment and/or environmental pollution. Usually an instruction will be given, together with a brief explanation and the possible result of ignoring the instruction.

A **Note** is used to highlight additional information which may be helpful to you but where there are no special safety implications.

The contents of this manual include suggested best working practices and procedures. These are issued for guidance only, they do not take precedence over the above stated individual responsibility and/or local safety regulations.

This manual and any other document supplied with the unit, are the property of York which reserves all rights. They may not be reproduced, in whole or in part, without prior written authorisation from an Authorised York representative.

1.6 Misuse of Equipment

Suitability for Application

The unit is intended for cooling water or glycol solutions and is not suitable for purposes other than those specified in these instructions. Any use of the equipment other than its intended use, or operation of the equipment contrary to the relevant procedures may result in injury to the operator, or damage to the equipment.

The unit must not be operated outside the design limits specified in this manual.

Structural Support

Structural support of the unit must be provided as indicated in these instructions. Failure to provide proper support may result in injury to the operator, or damage to the equipment.

Mechanical Strength

The unit is not designed to withstand loads or stresses from adjacent equipment, pipework or structures. Additional components must not be mounted on the unit. Any such extraneous loads may cause structural failure and may result in injury to the operator, or damage to the equipment.

General Access

There are a number of areas and features which may be a hazard and potentially cause injury when working with the unit unless suitable safety precautions are taken. It is important to ensure access to the unit is restricted to suitably qualified persons who are familiar with the potential hazards and precautions necessary for safe operation and maintenance of equipment containing high temperatures, pressures and voltages.

Pressure Systems

The unit contains refrigerant vapour and liquid under pressure, release of which can be a danger and cause injury. The user should ensure that care is taken during installation, operation and maintenance to avoid damage to the pressure system. No attempt should be made to gain access to the component parts of the pressure system other than by suitably trained and qualified personnel.

Electrical

The unit must be earthed. No installation or maintenance work should be attempted on electrical equipment without first switching off, isolating and locking-off the power supplies. Work on live equipment must only be carried-out by suitably trained and qualified personnel. No attempt should be made to gain access to inside of the control panel, wiring or other electrical enclosures during normal operation of the unit.

Refrigerants and Oils

Refrigerants and oils used in the unit are generally non-toxic, non-flammable and non-corrosive, and pose no special safety hazards. Use of gloves and safety glasses are, however, recommended when working on the unit. Build up of refrigerant vapour, from a leak for example, does pose a risk of asphyxiation in confined or enclosed spaces and attention should be given to good ventilation. For more comprehensive information on safety precautions for use of refrigerants and oils, refer to the Materials Safety Data tables provided.

High Temperature and Pressure Cleaning

High temperature and pressure cleaning methods (e.g. steam cleaning) should not be used on any part of the pressure system as this may cause operation of the pressure relief device(s). Detergents and solvents which may cause corrosion should also be avoided.

1.7 Emergency Shutdown

In case of emergency the fused disconnect switch in the supply lines to the electro-mechanical starter or the fused disconnect switch on the solid state starter should be set to 'OFF'.

1.8 Safety Labels

The following labels are fixed to each unit to give instruction, or to indicate potential hazards which may exist.

White symbol on blue background
For safe operation, read the Instructions first

Black symbol on yellow background
Warning: This machine may start automatically without prior warning

Black symbol on yellow background
Warning: Hot surface

Black symbol on yellow background
Warning: Safety relief valve may discharge gas or liquid without prior warning

Black symbol on yellow background
Warning: Isolate all electrical sources of supply before opening or removing the cover, as lethal voltages may exist

Black symbol on yellow background
General attention symbol

1.9 Material Safety Data

Refrigerant Data:	
Safety Data	**R134a**
Toxicity	Low.
In contact with skin	Liquid splashes or spray may cause freeze burns. Unlikely to be hazardous by skin absorption. Thaw affected areas with water. Remove contaminated clothing carefully — may adhere to skin in case of freeze burns. Wash affected areas with plenty of warm water. If symptoms occur (irritation or blistering) obtain medical attention.
In contact with eyes	Vapour has no effect. Liquid splashes or spray may cause freeze burns. Immediately irrigate with eyewash solution or clean water for at least 10 minutes. Obtain immediate medical attention.
Ingested	Highly unlikely to occur — but should this occur freeze burn will occur. Do not induce vomiting. Provided patient is conscious, wash mouth with water and give about 250 ml (0.5 pint) to drink. Obtain immediate medical attention.
Inhalation	High atmospheric concentrations may have an anaesthetic effect, including loss of consciousness. Very high exposures may cause an abnormal heart rhythm and prove suddenly fatal.
	At higher concentration there is a danger from asphyxiation due to reduced oxygen content of atmosphere. Remove patient to fresh air, keep warm and at rest. Administer oxygen if necessary. Apply artificial respiration if breathing has ceased or shows signs of failing. In event of cardiac arrest apply external cardiac massage. Obtain immediate medical attention.
Further medical advice	Symptomatic and supportive therapy is indicated. Cardiac sensitisation has been described which may, in the presence of circulating catecholamines such as adrenalin, give rise to cardiac arrhythmia's and subsequent arrest following exposure to high concentrations.
Long term exposure	A lifetime inhalation study in rats has shown that exposure to 50,000 ppm resulted in benign tumours of the testis. This is not considered to be of relevance to humans exposed to concentrations at or below the occupational exposure limit.
Occupational exposure limits	Recommended limit: 1000 ppm v/v - 8 hr TWA.
Stability	Not specified.
Conditions to avoid	Use in presence of naked flames, red hot surfaces and high moisture levels.
Hazardous reactions	May react violently with sodium, potassium, barium and other alkali and alkaline earth metals. Incompatible materials: Magnesium and alloys containing more then 2% magnesium.
Hazardous decomposition products	Halogen acids by thermal decomposition and hydrolysis.
General precautions	Avoid inhalation of high concentrations of vapours. Atmospheric concentrations should be minimised and kept as low as reasonably practicable below the occupational exposure limit. The vapour is heavier than air and collects at low level and in confined areas. Ventilate by extraction at lowest levels.
Respiratory protection	Where doubt exists on atmospheric concentration, approved breathing apparatus should be worn. This should be self contained or of the long breather type.
Storage	Keep containers dry and in a cool place away from fire risk, direct sunlight, and all sources of heat such as radiators. Keep at temperatures not exceeding 45 °C.
Protective clothing	Wear overalls, impervious gloves and goggles/face protection.

Spill/leak procedure	Ensure suitable personal protective clothing and respiratory protection is worn. Provided it is safe to do so, isolate the source of the leak. Allow small spillage's to evaporate provided there is suitable ventilation. Large spillage's: Ventilate area. Contain spillage's with sand, earth or any suitable absorbent material. Prevent liquid from entering drains, sewers, basements and work pits since vapour may create a suffocating atmosphere.
Disposal	Best to recover and recycle. If this is not possible, destruction is to be in an approved facility which is equipped to absorb and neutralise acids and other toxic processing products.
Fire extinguishing data	Non-flammable at atmospheric conditions.
Containers	Fire exposed containers should be kept cool with water sprays. Containers may burst if overheated.
Fire fighting protective equipment	Self contained breathing apparatus and protective clothing must be worn in fire conditions.

Refrigerant Oil Data	
Safety Data	**York "H" Oil**
Classification	Non-hazardous
In contact with skin	Minimally irritating. No first aid necessary. Exercise reasonable personal cleanliness including cleansing exposed skin areas several times daily with soap and water. Launder soiled work clothes at least weekly.
In contact with eyes	Flush eyes with eyewash solution or clean water for 15 minutes and consult a physician.
Ingested	May cause nausea and diahorrhea. Obtain immediate medical attention.
Inhalation	If oil mist is inhaled, remove to fresh air and consult a physician.
Occupational exposure limits	Not determined.
Stability	Stable but hygroscopic - store in sealed containers.
Conditions to avoid	Strong oxidisers, caustic or acid solutions, excessive heat. May degrade some paints and rubber materials.
Hazardous decomposition	Not fully, Analogous compounds evolve carbon monoxide, carbon dioxide and other unidentified fragments when burned. Burning may evolve irritating/noxious fumes.
Respiratory protection	Use in well ventilated areas - ventilate locally.
Protective clothing	Goggles or face shield should be worn. Gloves not necessary, but recommended, especially for prolonged exposure.
Spill / Leak procedure	Wear suitable protective equipment. Especially goggles. Stop source of spill. Use absorbent materials to soak up fluid (i.e. sand, sawdust and commercially available materials).
Disposal	Incinerate the oil and all associated wastes in an approved facility in accordance with local laws and regulations governing oily wastes.
Fire extinguishing data	Flash point over 300°C. Use dry chemical, carbon dioxide or foam. Spraying water on hot or burning liquid may cause frothing or splashing.
	If a leak or spill has not ignited use water spray to disperse the vapours and to provided protection for persons attempting to stop the leak.
Containers	Fire exposed containers should be kept cool with water sprays.
Fire fighting protective equipment	Self contained breathing apparatus should be worn in fire conditions.

Thermal & Acoustic Materials Data	
Health Hazard & First Aid	Toxicity Index <10 to NES713 Issue 3 (1991): Non-hazardous, non-toxic. No first aid necessary.
Stability / Reactivity	Stable.
Handling / Use / Disposal	No special handling precautions required. Dispose of according to local laws and regulations governing non-biodegradable non-hazardous solid wastes.
Fire & Explosion	Flammability rating Class 1 to BS 476 pt 7: Non-flammable. If forced to burn, combustion products are typically over 95% carbon dioxide and carbon monoxide.

2 Product Description

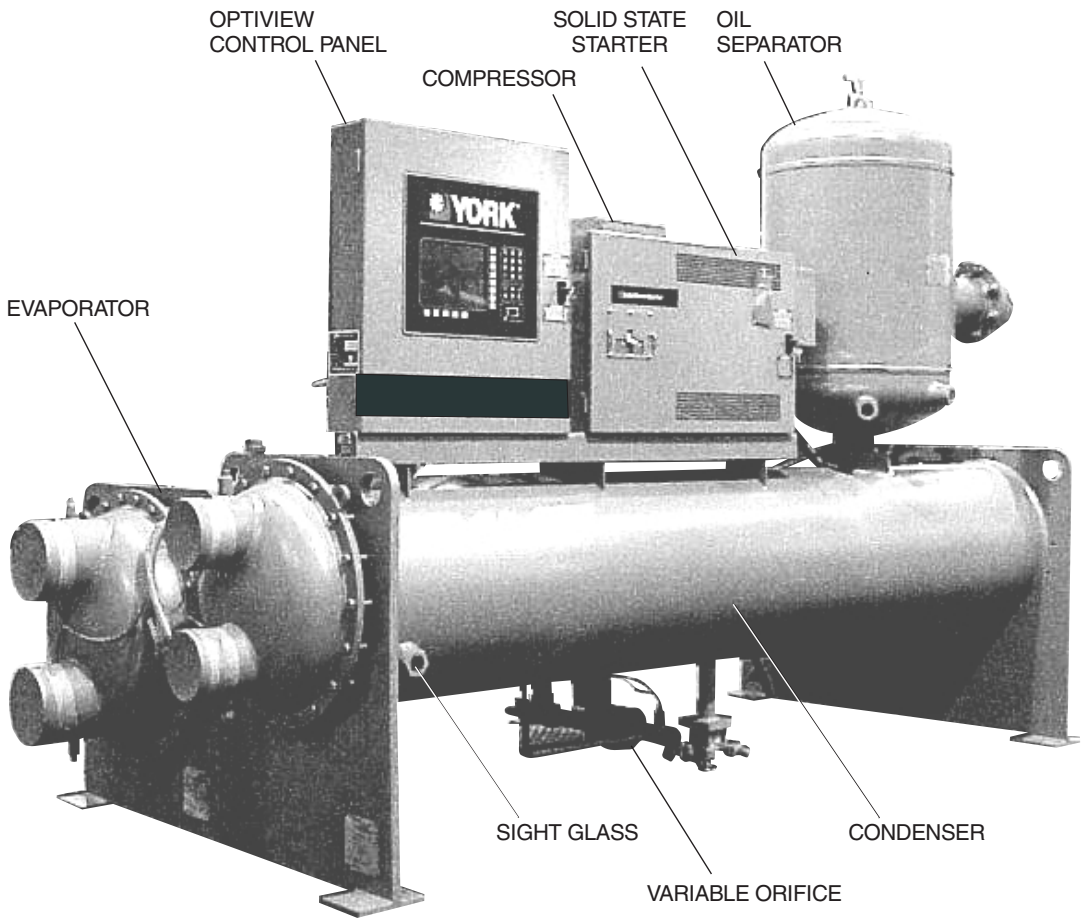

Figure 2.1 YR Rotary Screw Liquid Chiller (Front View)

2.1 General (Figure 2.1)

The York YR Rotary Screw Liquid Chiller is primarily used for large air conditioning systems, but may be used on other applications. Each unit is completely factory-packaged including compressor, evaporator, condenser, subcooler, oil separator, lubrication system, isolation valves, drive motor, optional motor starter and control panel.

Units are shipped as standard with a full charge of refrigerant and oil. Units can also be shipped in sections (optional) to accommodate job site requirements. An optional shipping skid is also available for ease of handling.

Exterior surfaces are protected with one coat of Caribbean blue machinery paint.

2.2 Compressor

The rotary screw compressor uses state-of-the-art technology to provide the most reliable and energy efficient compressor available at all operating conditions. The compressor is a positive displacement, variable volume, direct drive, twin helical rotary screw compressor. The male rotor is a direct drive by the motor; the female rotor is an idler that is driven by the male rotor. The rotors do not touch each other or the compressor housing. The rotors are separated by a hydraulic oil seal, which prevents high pressure gas from leaking into low pressure areas.

The compressor housing is made of cast iron, precision machined to provide minimal clearance for the rotors.

The rotors are manufactured from forged steel and use asymmetric profiles. The compressor incorporates a complete anti-friction bearing design for reduced power and increased reliability. Four separate cylindrical roller bearings handle radial loads. Two 4-point angular contact ball bearings handle axial loads. Together they maintain accurate rotor positioning at all pressure ratios thereby minimising blow-by and maintaining efficiency.

Oil is injected into the compressor by differential pressure to lubricate the bearings, seal the rotors and remove the heat of compression. The injected oil mixes with the compressed gas and is separated from the refrigerant gas in the oil separator.

The compressor has an oil reservoir located at the rotor bearings to provide lubrication during start-up and during coast-down even in the event of a power failure.

A check valve is installed in the compressor discharge housing (suction housing for S4 and S5 compressors) to prevent reverse running of the rotors due to system refrigerant pressure gradients during shutdown.

The open-drive compressor shaft seal consists of a spring-loaded, precision carbon ring, high temperature elastomer "0" ring static seal, and stress-relieved, precision lapped collars. The entire shaft seal cavity is at low pressure, being vented to the oil drain from the compressor, combining low pressure with direct oil cooling for long seal life.

Capacity control is achieved by use of a slide valve providing fully modulating capacity control from 10% to 100% of full load. The slide valve is positioned between the male and female rotors and moves axially to match the compressor capacity to that of the evaporator refrigeration load. As the slide valve moves toward the unloaded position, less suction gas is pumped through the compressor.

The slide valve is actuated by oil pressure controlled by external solenoid valves via the control panel. When the compressor is shut off, a spring returns the slide valve to unloaded position to ensure that the compressor starts with the slide valve in the unloaded position.

2.3 Motor

The compressor motor is a 2-pole, continuous-duty, cage induction type with suction gas cooling (semi-hermetic design).

2.4 Lubrication

An oil pressure transducer is located on the compressor oil manifold. The differential pressure is measured as the difference between the oil pressure transducer and the filter pressure transducer located in the oil separator.

This value is compared to the limits in the control panel logic. If the oil filter differential reaches 138 kPa (20 PSID), a warning message is displayed on the control panel, at 172.5 kPa (25 PSID), a safety shutdown is initiated.

The oil leaving the oil eductor manifold block flows into the compressor to lubricate the compressor bearings and shaft seal. The oil injected into the compressor mixes with refrigerant gas during compression. The oil and refrigerant gas is discharged into the oil separator, where it is separated and returned to the oil sump. A high discharge temperature safety is located in the discharge line, between the compressor and oil separator. This safety will initiate a safety shutdown.

Oil cooling is accomplished by liquid injection into the suction of the compressor

2.5 Oil Separator

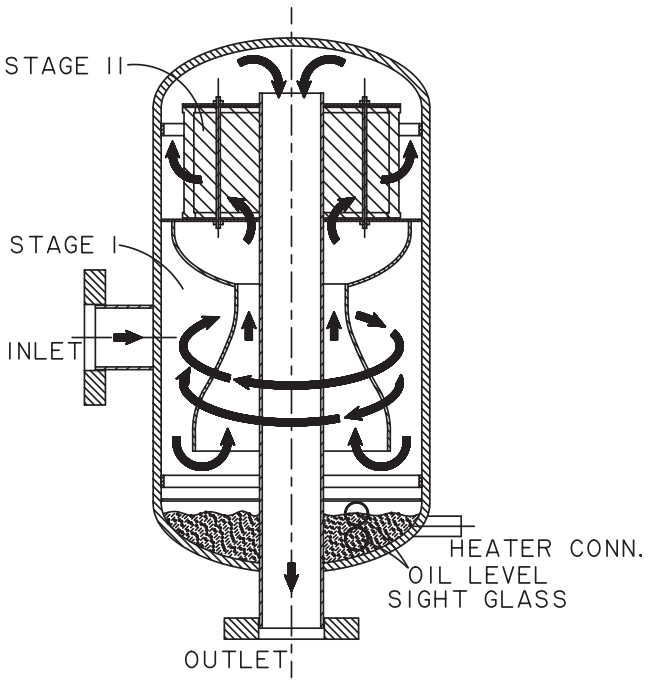

Figure 2.2 Oil Separator

The oil separator removes the oil that was injected into the compressor. The separator is a vertical two stage design without moving parts.

In the first stage of oil separation, high velocity oil and refrigerant gas in the compressor discharge line undergoes a rapid reduction in velocity as it enters the large diameter oil separator. Most of the oil drops out of the refrigerant gas stream due to the reduction in velocity. The oil falls by gravity into the oil reservoir located in the bottom of the oil separator.

The second stage of oil separation is achieved in the oil coalescing element section of the oil separator. The oil mixed with the refrigerant entering the coalescer element is a very fine aerosol mist. These small aerosol mist particles wet the coalescer element media and form larger oil droplets which fall by gravity to the bottom of the coalescer element section. The oil collected in the coalescer section is drained from the oil separator with a small amount of refrigerant gas. This provides the high pressure “gas drive” for the eductors to return oil from the evaporator.

The oil separator has a design working pressure of 16.2 bar. Two sight glasses are provided in the oil separator for monitoring the oil level and verifying performance of the coalescer element. Liquid oil should be visible in the top glass of the oil separator when the chiller is off. During operation, oil may be higher or lower due to system load and operating conditions.

An oil drain and charging valve is located on the bottom of the oil separator. A 5/8 inch male flare connection is provided for draining and charging. Oil can be added into the oil reservoir with the chiller in service.

A temperature actuated immersion oil heater is located in the oil separator reservoir. Power wiring is provided to the control panel.

2.6 Oil Filter

The oil flows from the oil separator through the 3 micron oil filter. Filtered oil then flows to an oil manifold that is located at the compressor.

A dual oil filter housing with isolation valves is optional on all units. This allows switching between two 3 micron oil filters and changing of the off line filter during operation.

2.7 Oil Eductor Circuit

The oil eductor circuit automatically recovers any oil that may migrate to the evaporator and returns it to the compressor. The oil eductor circuit manages the amount of oil in the refrigerant charge. A small amount of oil is normal in the refrigerant charge and will be found in the evaporator. If not properly managed the oil will accumulate and have an adverse affect on unit performance.

The oil eductor circuit consists of two refrigerant/oil filter driers, an eductor block and the interconnecting piping.

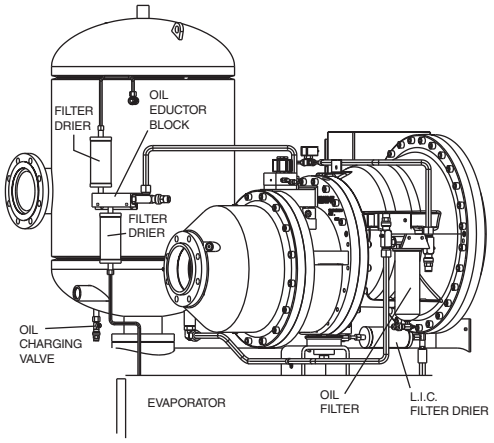

Figure 2.3 Oil Circuit

The eductors operate using the 'jet pump' principle. Discharge pressure gas and oil flows through a filter dryer to a regulating orifice and nozzle located in the eductor block. The reduced pressure (pumping action) is created by the velocity of the discharge pressure gas and oil flowing through the orifice and nozzle. This creates a reduced pressure area that allows the oil-rich refrigerant and oil to flow from the evaporator into the compressor.

Oil-rich refrigerant flows into the eductor block through the filter drier from the evaporator. The oil-rich refrigerant mixes with the discharge pressure gas and flows into the compressor.

2.8 Heat Exchangers

Shells

Evaporator and condenser shells are fabricated from rolled carbon steel plates and have fusion welded seams. Carbon steel tube sheets, drilled to accommodate the tubes, are welded to the ends of each shell. Intermediate tube supports are fabricated of 13 mm thick carbon steel plates. The refrigerant side of each shell has a design working pressure of 16.2 bar and is tested at 37.5 barg. Each vessel has a single or dual refrigerant relief device.

Tubes

Heat exchanger tubes are 19 mm OD copper alloy with a high efficiency, internally and externally enhanced design to provide optimum performance. Each tube is roller expanded into the tube sheets to provide a leak-proof seal. Each tube is individually replaceable.

2.9 Evaporator

The evaporator is a shell and tube, flooded type, heat exchanger with a distributor trough providing uniform distribution of refrigerant over the entire shell length to ensure optimum heat transfer. A liquid level sight glass is located on the side of the shell to aid in determining proper refrigerant charge. A refrigerant charging valve is provided.

2.10 Condenser

The condenser is a shell and tube, flooded type, heat exchanger with a discharge gas baffle to prevent direct high velocity impingement on the tubes. The baffle distributes the refrigerant gas flow uniformly over the entire shell length for optimum heat transfer. A subcooler section is located in the bottom of the condenser to provide effective liquid refrigerant subcooling, improving cycle efficiency. The condenser shell also serves as a refrigerant receiver to store the system charge during servicing. Optional manually operated isolation valves are located at the inlet and outlet of the condenser. Valves are also provided to facilitate removal of the refrigerant from the system.

2.11 Refrigerant Flow Control

Sub-cooled liquid refrigerant flows out of the condenser via the liquid line into the evaporator by differential pressure. A variable metering orifice controls refrigerant flow to the evaporator. The orifice is selected based upon the operating conditions of the unit.

The variable orifice actuator is controlled by the differential pressure set point that is field programmable in the control panel.

A liquid level sensor, located in the condenser, detects the refrigerant level. The refrigerant level in the condenser is expressed as 0% (minimum) to 100% (maximum). While the chiller is shut down, an open signal is applied to the actuator, driving the orifice to the fully open position. When the chiller is started, a close signal is applied to the orifice actuator for the duration of the 'Start Sequence Initiated' period. This positions it to approximately the 75% closed position prior to starting the compressor motor. To allow for actuator timing variances and assure the valve is positioned at the 75% closed position, the duration of the 'Start Sequence Initiated' period is programmable.

2.12 Capacity Control

Capacity control is accomplished by using differential pressure to move the slide valve. As the slide valve is moved axially between the compressor rotors the volume of vapour pumped by the compressor is changed to match the system requirements.

Leaving chilled liquid temperature (LCLT) is continuously monitored and compared to the LCLT Setpoint. When the LCLT is outside the range of the setpoint value a signal is sent to energize the control block directional solenoid valves.

A slide valve potentiometer is used to provide feedback to display slide valve position as a percentage of full load.

2.13 Water Boxes

Removable water boxes fabricated from heavy gauge sheet steel are fitted to each end of both heat exchangers, the design working pressure is 10 bar. Integral steel water baffles are located and welded within the water boxes to provide required pass arrangements. Stub-out water nozzle connections with victaulic grooves are welded to the water boxes. Drain and vent connections are provided in each evaporator and condenser water box.

2.14 Control Panel

The York OptiView control panel is a factory mounted, wired and tested microprocessor based control system. The panel automatically controls the operation of the unit in meeting system cooling requirements while minimising energy usage. For detailed information refer to the YR OptiView Control Panel Operating Instructions.

2.15 Options and Accessories

Model 'B' Solid State Starter

The liquid cooled solid state starter is a reduced voltage soft starter that controls and maintains a constant current flow to the motor during start-up. It is compact and mounted on the unit adjacent to the motor terminals. Power and control wiring is factory supplied. The starter enclosure is IP33 rated with a hinged access door with lock and key.

Standard features include: digital readout at the control panel of 3-phase voltage and current; high and low line voltage protection; 115 V control transformer; three-leg sensing overloads; phase rotation and single-phase failure protection; and momentary power interruption protection. An integral door interlocked fused disconnect switch is supplied as standard.

Factory Insulation

19 mm or 38 mm flexible closed-cell plastic type anti-sweat insulation on the evaporator and liquid refrigerant piping.

Factory Water Flanges

Welded to water nozzles on evaporator and condenser (companion flanges and connecting parts not included).

Flow Switches

Paddle-type, vapour-proof water flow switches (10 or 20 bar DWP) for chilled and cooling water circuits.

Pressure Safety Devices

Pressure relief valves etc. for evaporator and condenser.

Dual Oil Filter

Housing with isolation valves to eliminate downtime during filter changes.

Refrigerant Isolation Valves

Factory installed valves in compressor discharge line and refrigerant liquid line to enable refrigerant isolation/storage in unit condenser during servicing.

Hot Gas By-pass System

A hot gas bypass system can be factory installed to allow unit operation down to virtually zero load if required.

Sequence Control Kits

Sequence control kits for two, three or four units with series or parallel chilled water arrangement. Kits provide control and switching based on return water temperature and enable centralised start/stop.

Spring Isolators

25mm deflection level-adjusting/spring-type vibration isolator assemblies.

Form 3 Shipment - Motor/Compressor Separate from Shells

Shipped as three major assemblies: Compressor/motor assembly removed from shells and skidded. Evaporator/condenser is not skidded. Oil separator is skidded. All wiring integral with compressor is left on it, and all conduit is left on shells. All openings on compressor, oil separator, and shell are closed and charged with dry nitrogen (0.5 barg). Miscellaneous packaging of control panel, tubing, water temperature controls, wiring, oil isolators, solid state starter (option), etc; R134a charge not included.

Form 7 Shipment - Split Shells

Shipped as four major assemblies: Compressor/motor assembly removed from shells and skidded. Oil separator is skidded. Evaporator and condenser shells are separated at tube sheets and are not skidded. Refrigerant lines between shells are flanged and capped, requiring no welding. Tube sheets will require welding in field. All wiring integral with compressor is left on it. All wiring harnesses on shells are removed. All openings on compressor, oil separator and shells are closed and charged with dry nitrogen (0.5 barg). Miscellaneous packaging of control panel, tubing, water temperature controls, wiring, oil isolators, solid state starter (option), etc; R134A charge not included.

2.16 Nomenclature

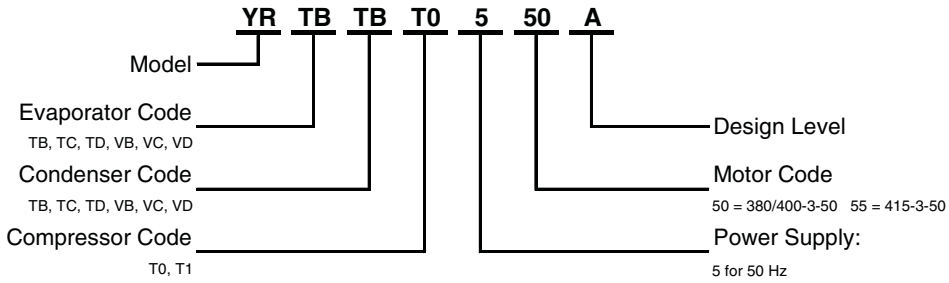

3 TRANSPORTATION, RIGGING AND STORAGE

3.1 General

YR units are shipped as a single factory assembled, piped, wired package, requiring minimum installation to make chilled water connections, condenser water connections, refrigerant atmospheric relief connections, and electrical power connections.

Units can also be shipped dismantled when required by rigging conditions, but generally it is more economical to enlarge access openings to accommodate the factory assembled unit. Units shipped dismantled **MUST** be field assembled under the supervision of a York representative.

FIELD ASSEMBLED UNITS ONLY

A York authorised representative must check the installation, supervise the initial start-up and operation of all newly installed units.

The York Warranty may be voided if the following restrictions are not adhered to:

1. No valves or connections should be opened under any circumstances because such action will result in loss of the factory nitrogen charge.

2. Do not dismantle or open the unit for any reason except under the supervision of a York representative.

3. When units are shipped dismantled, notify the nearest York office in ample time for a York representative to supervise rigging the unit to its operating position and the assembly of components.

4. Do not make final power supply connections to the compressor motor, solid state starter or control panel.

5. Do not charge the compressor with oil.

6. Do not charge the unit with refrigerant.

7. Do not attempt to start the system.

8. Do not run hot water (40°C maximum.) or steam through the evaporator or condenser at any time.

3.2 Shipment

The unit may be ordered and shipped in any of the following forms:

Form 1 – Factory Assembled Unit (Complete with motor, refrigerant and oil charges)

1. The motor/compressor assembly mounted, with all necessary interconnecting piping assembled. control panel is mounted on the unit. Complete unit factory leak tested, evacuated and charged with R134a.

   An optional Solid State Starter can be factory mounted and wired.

2. Miscellaneous material – Four (4) vibration isolation pads (or optional spring isolators and brackets).

Form 2 – Factory Assembled Unit
(Complete with motor. Refrigerant and oil charges shipped separately).

1. The motor/compressor assembly mounted, with all necessary interconnecting piping assembled. control panel is mounted on the unit. Complete unit factory leak tested, evacuated and charged with holding charge of nitrogen.

   An optional Solid State Starter can be factory mounted and wired.

2. Miscellaneous material – Four (4) vibration isolation pads (or optional spring isolators and brackets).

Form 3 – Motor/Compressor Separate From Shells

Shipped as three major assemblies. Unit first factory assembled, refrigerant piped, wired and leak tested; then dismantled for shipment. Compressor/motor assembly removed from shells and skidded. Evaporator/condenser shells are not skidded.

All compressor wiring attached, and all conduit is left on shell. All openings on compressor, oil separator, and shell are closed and charged with dry nitrogen (0.14 to 0.2 barg).

Miscellaneous packaging of control panel, tubing, water temperature controls, wiring, oil, isolators, solid state starter (option), etc., refrigerant charge shipped separately.

Units shipped dismantled MUST be re-assembled by, or under the supervision of, a York representative.
(See Form 160.81-N1)

Form 7 – Split Shells

Shipped as four major assemblies. Unit first factory assembled, refrigerant piped, wired and leak tested; then dismantled for shipment. Compressor/motor assembly removed from shells and skidded.

Evaporator and condenser shells are separated at tube sheets and are not skidded. Refrigerant lines between shells are flanged and capped, requiring no welding.

All compressor wiring attached. All wiring harnesses on shells are removed. All openings on compressor and shells are closed and charged with dry nitrogen (0.14 to 0.2 barg).

Miscellaneous packaging of control panel, tubing, water temperature controls, wiring, oil isolators, solid state starter (option), etc.; refrigerant charge shipped separately.

Units shipped dismantled MUST be re-assembled by, or under the supervision of, a York representative.
(See Form 160.81-N1)

When more than one unit is ordered, the major parts of each unit will be marked to prevent mixing of assemblies. (Piping and Wiring Drawings will be furnished by York.)

3.3 Inspection, Damage and Shortage

The unit shipment should be checked on arrival to see that all major pieces, boxes and crates are received. Each unit should be checked before unloading, for any visible signs of damage. Any damage or signs of possible damage must be reported to the transportation company immediately for their inspection.

York will not be responsible for any damage in shipment or at job site or loss of parts.

When received at the job site all containers should be opened and contents checked against the packing list. Any material shortage should be reported to York immediately.

Data Plate

A unit data plate is mounted on the control panel assembly of each unit, giving unit model number; design working pressure; water passes; refrigerant charge; serial numbers; and motor power characteristics and connection diagrams.

Additional information may be found on the motor data plate. This information should be included when contacting the factory on any problem relating to the motor.

3.4 Rigging

The complete standard unit is shipped without skids. (When optional skids are used it may be necessary to remove the skids so riggers skates can be used under the unit end sheets to reduce overall height.)

Each unit has four (4) lifting holes (two in each end) in the end sheets which should be used to lift the unit.

Care should be taken at all times during rigging and handling of the chiller to avoid damage to the unit and its external connections. Lift only using holes shown.

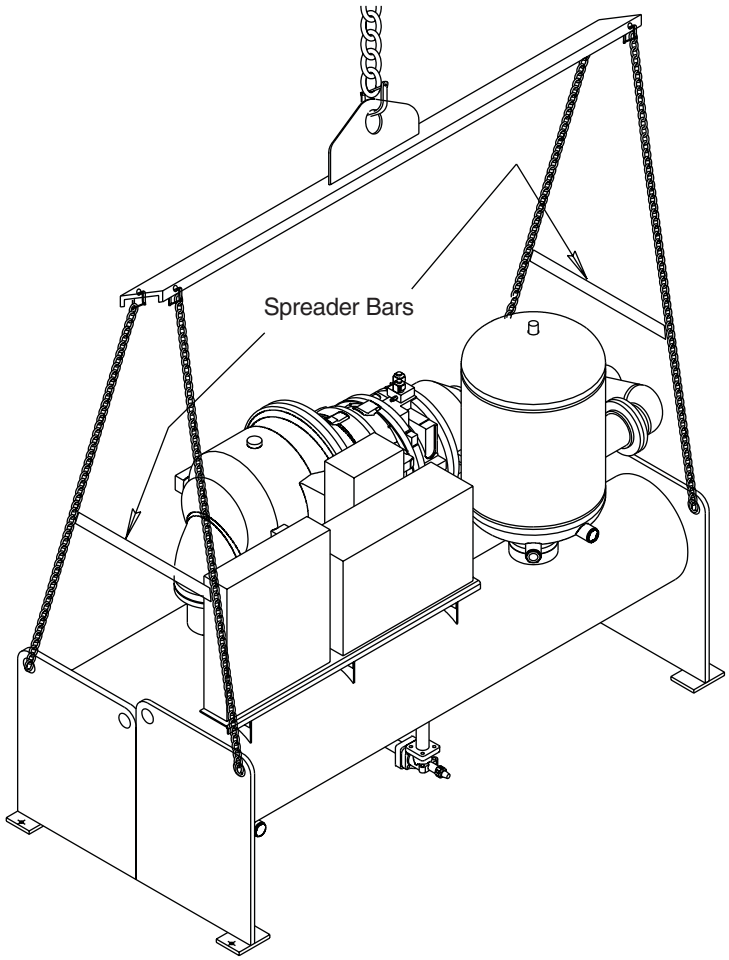

Figure 3.1 Rigging

Do not lift the unit with slings around motor/compressor assembly or by means of eye bolts in the tapped holes of the compressor motor assembly. Do not turn a unit on its side for rigging. Do not rig vertically.

The rigging and operating weights and overall dimensions are given in Section 9 as a guide in determining the clearances required for rigging. (Add 150 mm to overall height for optional skidded unit.).

Page Left Intentionally Blank

4 INSTALLATION

4.1 Location

YR units are furnished with vibration isolator mounts for basement or ground level installations. Units may be located on upper floor levels providing the floor is capable of supporting the total unit operating weight and optional spring isolators are used.

Sufficient clearance to facilitate normal service and maintenance work must be provided all around and above the unit and particularly space provided at either end to permit cleaning or replacement of evaporator and condenser tubes. (See CLEARANCES).

A doorway or other sufficiently large opening properly located may be used. The chiller should be located in an indoor location where temperatures range from 4°C to 43°C.

4.2 Foundation

A level floor, mounting pad or foundation must be provided by others, capable of supporting the operating weight of the unit.

4.3 Clearances

Clearances should be adhered to as follows:

Rear and above unit – 610 mm.

Front of unit – 915 mm.

Tube Removal – see table below

SHELL CODE	TUBE REMOVAL SPACE (mm)
TB, TC, TD	3075
VB, VC, VD	4270

4.4 Rigging Unit to Final Location

Rig the unit to its final location on the floor or mounting pad, lift the unit (or shell assembly) by means of an overhead lift and lower the unit to its mounting position. (If optional shipping skids are used, remove them before lowering the chiller to its mounting position.)

At this point units shipped dismantled should be assembled under the supervision of a York representative.

If the evaporator is to be field insulated, the insulation should be applied to the evaporator before the unit is placed in position while the unit is in the lift position. Be sure the unit is properly supported. (See INSULATION).

4.5 Locating and Installing Isolator Pads

The isolator pad mounts are to be located as shown in Figure 4.1

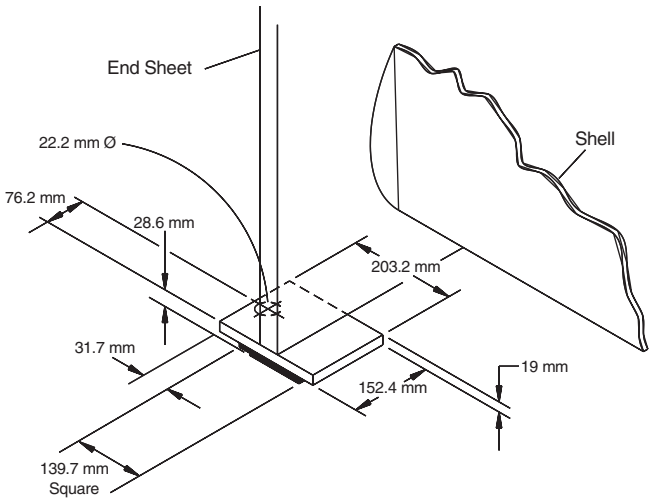

Figure 4.1 Neoprene Isolators

After the isolator pads have been placed into position on the floor, lower the chiller onto the pads. When the unit is in place, remove the rigging equipment and check that the unit is level both longitudinally and transversely. The unit should be level within 6 mm from one end to the other end and from front to the rear. If the chiller is not level within the amount specified, lift it and place shims between the isolation pad and the chiller tube sheets. (Shims furnished by the installer.) Lower unit again and recheck to see that it is level.

Checking the Isolator Pad Deflection

All isolator pads should be checked for the proper deflection while checking to see if the unit is level. Each pad should be deflected approximately 4 mm. If an isolation pad is under-deflected, shims should be placed between the unit tube sheet and the top of the pad to equally deflect all pads.

Levelling the Unit

The longitudinal alignment of the unit should be checked by placing a level on the top centre of the evaporator shell under the compressor/motor assembly. Transverse alignment should be checked by placing a level on top of the shell end sheets at each end of the chiller.

4.6 Installing Optional Spring Isolators

When ordered, 4 spring type isolator assemblies will be furnished with the unit . The 4 assemblies are identical and can be placed at any of the 4 corners of the unit.

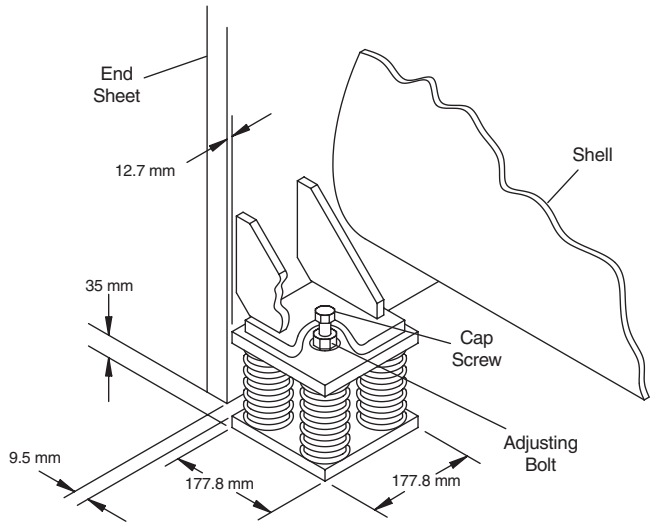

Figure 4.2 Optional Spring Isolators

While the unit is still suspended by the rigging, the isolator mounting brackets should be bolted to the unit. Place the four spring isolators in position. The threaded adjusting bolts in each isolator should be screwed out of the isolator until the extended head of the screw fits snugly into the isolator bracket hole. The unit should be lowered over the adjusting bolts.

The levelling bolts should now be rotated one (1) turn at a time, in sequence, until the unit end sheets are clear of the floor by 22 mm and the unit is level. Check that the unit is level, both longitudinally and transversely (see Levelling the Unit). If the levelling bolts are not long enough to level unit due to an uneven or sloping floor or foundation, steel shims (grouted, if necessary) must be added beneath the isolator assemblies as necessary.

After the unit is levelled, wedge and shim under each corner to solidly support the unit in this position while piping connections are being made, pipe hangers adjusted and connections checked for alignment. Then the unit is filled with water and checked for leaks. The levelling bolts should now be finally adjusted until the wedges and shims can be removed. The unit should now be in correct level position, clear of the floor or foundation and without any effect from the weight of the piping (spring isolator deflection should be approximately 25 mm).

4.7 Piping Connections

After the unit is levelled (and wedged in place for optional spring isolators) the piping connections may be made; chilled water, condenser water and refrigerant relief. The piping should be arranged with offsets for flexibility, and adequately supported and braced independently of the unit to avoid strain on the unit and vibration transmission. Hangers must allow for alignment of pipe. Isolators (by others) in the piping and hangers are highly desirable, and may be required by specifications, in order to effectively utilise the vibration isolation characteristics of the vibration isolation mounts of the unit.

Check for piping alignment – Upon completion of piping, a connection in each line as close to the unit as possible should be opened, by removing the flange bolts or coupling and checked for piping alignment. If any of the bolts are bound in their holes, or if the connection springs are out of alignment, the misalignment must be corrected by properly supporting the piping or by applying heat to anneal the pipe.

If the chiller/cooling water piping needs to be welded directly to the water pipe nozzles, the temperature sensors should be removed to prevent heat damage.

If the piping is annealed to relieve stress, the inside of the pipe must be cleaned of scale before it is finally bolted in place.

4.8 Evaporator and Condenser Water Piping

The evaporator and condenser liquid heads have nozzles which are grooved, suitable for welding 10.6 bar DWP flanges or the use of Victaulic couplings. Factory mounted flanges are optional.

The nozzles and water pass arrangements are delivered in accordance with the job requirements (see Product Drawings delivered with the job and Section 9). Standard units are designed for 10.6 bar DWP on the water side. If job requirements are for greater than 10.6 bar DWP, check the unit Data Plate before applying pressure to evaporator or condenser to determine if the chiller has provisions for the required DWP.

Inlet and outlet connections are identified by labels placed adjacent to each nozzle.

Foreign objects which could lodge in, or block flow through the evaporator and condenser tubes must be kept out of the water circuit. All water piping must be cleaned or flushed before being connected to the chiller pumps, or other equipment.

Permanent strainers (supplied by others) are required in both the evaporator and condenser water circuits to protect the chiller as well as the pumps, tower spray nozzles, chilled water coils and controls, etc. The strainer should be installed in the entering chilled water line, directly upstream of the chiller.

Water piping circuits should be arranged so that the pumps discharge through the chiller, and should be controlled as necessary to maintain essentially constant chilled and condenser water flows through the unit at all load conditions.

If pumps discharge through the chiller, the strainer may be located upstream from pumps to protect both pump and chiller. (Piping between strainer, pump and chiller must be very carefully cleaned before start-up.) If pumps are remotely installed from chiller, strainers should be located directly upstream of the chiller.

4.9 Water Treatment

The unit performance given in the Design Guide is based on a fouling factor of 0.044 m² °C/kW (0.00025 ft²hr °F/Btu). Dirt, scale, grease and certain types of water treatment will adversely affect the heat exchanger surfaces and therefore unit performance. Foreign matter in the water system(s) can increase the heat exchanger pressure drop, reducing the flow rate and causing potential damage to the heat exchanger tubes.

Aerated, brackish or salt water is not recommended for use in the water system(s). York recommend that a water treatment specialist is consulted to determine that the proposed water composition will not affect the evaporator materials of carbon steel and copper. The pH value of the water flowing through the heat exchangers must be kept between 7 and 8.5.

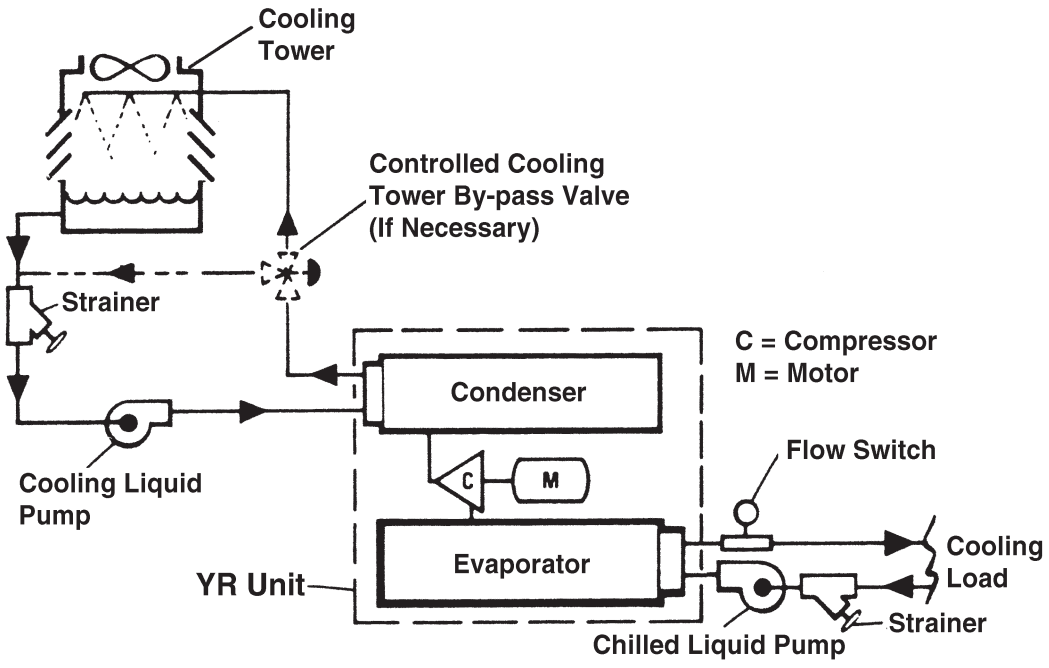

Figure 4.3 Typical Piping Arrangement

4.10 Glycol Solutions

For unit operation with chilled liquid temperatures leaving the evaporator at below 4°C, glycol solutions should be used to help prevent freezing. Section 9 gives recommended solution strength with water, as a percentage by weight, for the most common types of glycol. It is important to check glycol concentration regularly to ensure adequate concentration and avoid possible freeze-up in the evaporator.

When using glycol solutions, pressure drops are higher than with water. Special care must be taken not to exceed the maximum pressure drop allowed.

4.11 Condenser Water Circuit

For proper operation of the unit, condenser refrigerant pressure must be maintained above evaporator pressure. If operating conditions will fulfill this requirement, no attempt should be made to control condenser water temperature by means of automatic valves, cycling of the cooling tower fan or other means, since chillers are designed to function satisfactorily and efficiently when condenser water is allowed to seek its own temperature level at reduced loads and off-peak seasons of the year. However, if entering condenser water temperature can go below the required minimum, condenser water temperature must be maintained equal to or slightly higher than the required minimum. Refer to Figure 4.3 for a typical water piping schematic.

4.12 Stop Valves

Stop valves may be provided (by others) in the evaporator and condenser water piping adjacent to the unit to facilitate maintenance. Thermometer wells and pressure taps should be provided (by others) in the piping as close to the unit as possible to facilitate operating check.

4.13 Flow Switches (Field Installed)

A flow switch or pressure differential control in the chilled water line(s) adjacent to the unit is an accessory furnished for connection to the control panel. If a flow switch is used, it must be directly in series with the chiller and sensing only water flow through the chiller. The differential switch must sense pressure drop across the unit.

4.14 Drain and Vent Valves

Drain and vent valves (by others) should be installed in the connections provided in the evaporator and condenser liquid heads. These connections may be piped to drain if desired.

4.15 Checking Piping Circuits and Venting Air

After the water piping is completed, but before any water box insulation is applied. Tighten and torque (to maintain between 41 and 82 Nm) the nuts on the liquid head flanges. Gasket shrinkage and handling during transit may cause the nuts to loosen. If water pressure is applied before tightening is done, the gaskets may be damaged and have to be replaced.

Fill the chilled and condenser water circuits, operate the pumps manually and carefully check the evaporator and condenser water heads and piping for leaks. Repair leaks as necessary.

Before initial operation of the unit both water circuits should be thoroughly vented of all air at the high points.

4.16 Refrigerant Relief Piping

Each unit is equipped with pressure relief valves located on the condenser and evaporator for relieving excess pressure of the refrigerant charge to the atmosphere as a safety precaution in case of an emergency, such as fire.

Refrigerant relief vent piping (by others), from the relief valves to the outside of the building, is required by code in most areas and should be installed on all chillers. The vent line should be sized in accordance with the ANSI/ASHRAE-15, or local code. The vent line must include a dirt trap in the vertical leg to intercept and permit clean out and to trap any vent stack condensation. The piping MUST be arranged to avoid strain on the relief valves, using a flexible connection, if necessary.

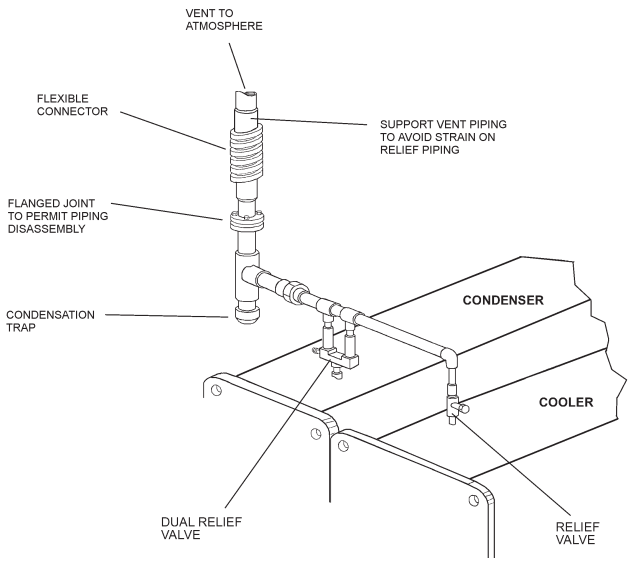

Figure 4.4 Typical Refrigerant Vent Piping from Relief Valves

4.17 Unit Piping

Compressor lubricant piping and system external piping are factory installed on all units shipped assembled. On units shipped dismantled, the lubricant piping to oil sump and oil cooler and system oil return connections should be completed, under the supervision of the York representative, using material furnished.

4.18 Electrical Connection

The following connection recommendations are intended to ensure safe and satisfactory operation of the unit. Failure to follow these recommendations could cause harm to persons, or damage to the unit, and may invalidate the warranty.

WARNING

No additional controls (relays, etc.) should be mounted in the control panel. Power and control wiring not connected to the control panel should not be run through the control panel. If these precautions are not followed it could lead to a risk of electrocution. In addition, electrical noise could cause malfunctions or damage the unit and its controls.

WARNING

After connection do not switch on mains power to the unit until it has been commissioned by York Authorised personnel. Some internal components are live when mains is switched on.

On units shipped disassembled, after installation of the control panel, control wiring must be completed between unit components and control panel or solid state starter, when used, using wiring harness furnished.

NOTE

No changes in unit wiring from that shown on drawings delivered shall be made without prior approval of the York representative.

WARNING

All electrical wiring should be carried out in accordance with local regulations. Customer supplied isolators and fuses may be installed next to the unit, avoiding locations close to refrigerant and water lines.

WARNING

All sources of supply to the unit must be taken via a common point of isolation (not supplied by York).

WARNING

After connection DO NOT switch on mains or control system power to the unit. Some internal components are live as soon as mains is switched on the unit and this must only be done by authorised persons.

The three position rocker switch on the control panel must remain in 'STOP/RESET' position until the unit is commissioned by authorised personnel. If the switch has been placed in the 'RUN' or 'START' position before commissioning, this must be reported to York otherwise warranty may be invalidated.

4.19 Power Wiring

Units are suitable for 380/400V - 3 Ø - 50 Hz or 415V - 3 Ø - 50 Hz nominal power supplies only. The correct electrical power supply is given on the unit data plate, which also details the motor connection diagrams.

4.19.1 Units with Electro-Mechanical Starter

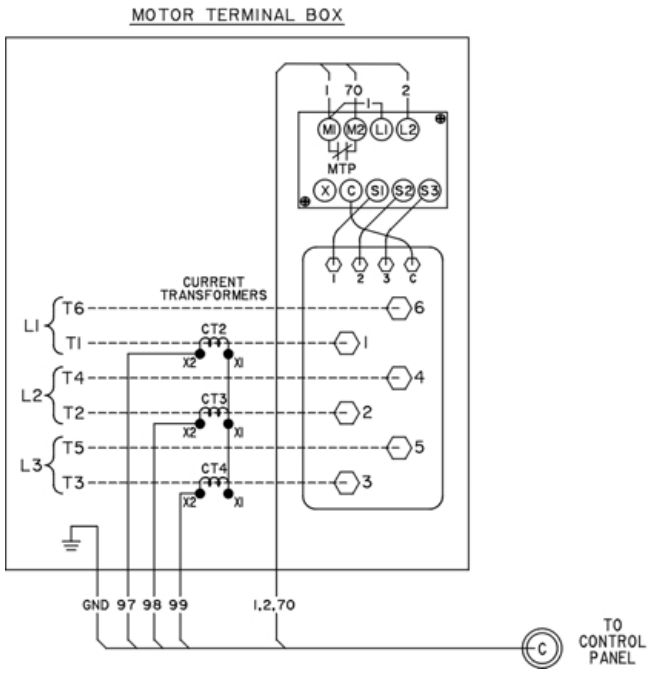

Figure 4.5 Motor Connections (E/M Starter)

Units supplied without a starter require one three phase supply to the motor from a remote electro mechanical starter (field supplied). A 115 Vac - 1Ph - 50 Hz supply of 15 amp capacity is also required for the control panel. An optional control transformer (1-1/2 KVA required) is available to meet this requirement.

CAUTION

Electro-Mechanical starters for the unit must be furnished in accordance with York Standard R-1079 to provide the features necessary for the starter to function properly with the York control system.

Route the cables forming the 3 phase power supply via the same hole in the motor terminal box gland plate, using a suitable cable gland, to ensure that no eddy currents are set up in the metal gland plate. If separate entries for each cable forming the 3 phase supplies are used, the metal gland plate must be replaced by a non-metallic gland plate.

DO NOT cut wires to final length or make final connections to the motor or starter power input terminals until approved by a York representative. To ensure correct motor rotation the starter power input and starter to motor connections must be checked with a phase sequence indicator in the presence of the York representative.

Route the main earth cable via the motor terminal box gland plate to the main earth connection stud on the side of the box.

Route the single phase control supply to the control panel with bare wire ends of maximum cable size 4 mm². Also connect an earth wire to the earth terminal using the M4 lug.

DO NOT make final power supply connections to control panel until approved by a YORK representative.

To ensure proper motor rotation the starter power input and starter to motor connections must be checked with a phase sequence indicator in the presence of the York representative.

4.19.2 Units with Solid State Starter (Optional)

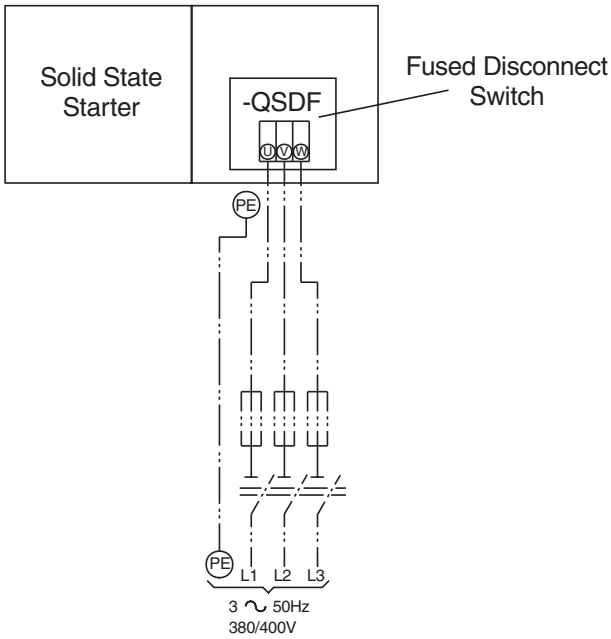

Figure 4.6 Solid State Starter Connections

Units equipped with a solid state starter require a three phase power supply plus earth to the starter. Power wiring from the starter to the motor is factory fitted. Power wiring to the control panel is also factory fitted via a control transformer supplied with the Solid State Starter.

Route the cables forming the 3 phase power supply via the same hole in the solid state starter gland plate / gland box on top of the starter, using a suitable cable gland, to ensure that no eddy currents are set up in the metal gland plate. If separate entries for each cable forming the 3 phase supplies are used, the metal gland plate / gland box must be replaced by a non-metallic version.

DO NOT cut wires to final length or make final connections to starter input terminals until approved by a York representative.

To ensure proper motor rotation the starter power input connections must be checked with a phase sequence indicator in the presence of the York representative.

Route the earth cable via the starter gland plate to the main earth connection stud on the side of the starter.

4.20 Control Connections

Customer voltage free contacts must be suitable for device contact rating to be 5 mA at 115 Vac. If the voltage free contacts form part of a relay or contactor, the coil of the device MUST be suppressed using a standard R/C suppressor to avoid electrical noise which could cause a malfunction or damage to the unit.

To avoid the possibility of motor failure due to excessive start cycles, the unit should not normally be cycled using the remote connections. Cycling of the unit based on cooling demand is accomplished automatically by the control panel. In addition, the control panel has a programmable time clock function as a standard feature with holiday capability. This offers one preset automatic Start-Stop per day on a seven day calendar basis with the ability to program a single additional holiday start and stop time up to a week in advance.

4.20.1 Remote Start / Stop
(Start - TB4 terminals 1 & 7)
(Stop - TB4 terminals 1 & 8)

When the control panel is in the 'REMOTE' operating mode, the 'COMPRESSOR' switch is in the 'RUN' position and the 'REMOTE READY TO START CONTACTS' (TB2: terminals 26 & 27) indicate the unit is ready to start. Holding contacts open across the 'REMOTE STOP' connections and closing contacts across the 'REMOTE START' connections' will start the unit. A subsequent closure of the 'REMOTE STOP' contacts causes the unit to shutdown.

If the 'REMOTE START' and 'REMOTE STOP' connections are to be used at a remote control station rather than by an EMS/BAS it is recommended that a change over contact is used between the terminals.

When the unit is operated in 'REMOTE' mode using the 'REMOTE START-STOP' connections, an 'EMERGENCY STOP' by an operator or others will 'STOP' the compressor from the control panel and prevent the unit from restarting. However, the operator cannot locally start the compressor using the 'COMPRESSOR' start switch, when the control panel is in the 'REMOTE' operating mode.

4.20.2 Remote / Local Cycling
(TB4 terminals 1 & 13)

The closure of an automatic reset device across these terminals will permit the unit to operate in all operating modes. Conversely, an opening of the device contacts will inhibit the unit from operating.

4.20.3 Chilled Liquid Flow Interlock
(TB4 terminals 1 & 12)

A suitable flow switch which closes on presence of flow must be installed between these contacts, to give adequate protection against loss of chilled liquid flow.

4.20.4 Cooling Liquid Flow Interlock (Optional)
(TB4 terminals 1 & 11)

A suitable flow switch which closes on presence of flow can be installed between these contacts, to provide protection against loss of cooling liquid flow.

4.20.5 Multi Unit Sequence
(TB4 terminals 1 & 9)

For multiple unit installation applications, 'MULTI UNIT SEQUENCE' connections are available to start and stop each unit. The maintained closure of remote contacts will permit the unit to operate in all operating modes with the 'COMPRESSOR' switch in the 'RUN' position. Conversely, an opening of the contacts will inhibit the unit from operating.

4.20.6 Auxiliary Safety Shutdown
(TB4 terminals 1 & 31)

Momentary or maintained closure of a normally open switch or relay contacts will cause the unit to shutdown. The unit will not restart until the contacts open and a manual reset and restart of the unit is carried out.

4.20.7 Remote Leaving Chilled Water Temperature Setpoint Reset - PWM (TB4 terminals.1 & 19)

The locally programmed leaving chilled water temperature setpoint can be reset by a 1 to 11 second timed closure of remote contacts connected to these terminals. The signal will only be accepted when the control panel is in the digital 'REMOTE' operating mode.

An accepted signal will adjust the leaving chilled water temperature up to 22.2°C upwards from the locally programmed value. Unit capacity will be adjusted to achieve the new setting of leaving chilled water temperature, providing the compressor motor current is below the current limit setpoint.

A one-second pulse corresponds to no offset and therefore no adjustment of the preprogrammed leaving chilled liquid temperature setpoint. An eleven second pulse corresponds to the locally preprogrammed maximum allowable offset (5.6°C, 11.1°C, 16.7°C or 22.2°C) above the leaving chilled water temperature setpoint. The amount of offset varies linearly with pulse-width.

4.20.8 Remote Current Limit Setpoint - PWM
(TB4 terminals 1 & 20)

The motor current limit setpoint can be adjusted remotely by a 1 to 11 second timed closure of remote contacts connected to these terminals. The input signal will only be accepted when the control panel is in the digital 'REMOTE' operating mode.

An accepted signal will set the motor current between 100% and 30% of full load amps. Unit capacity control will remain from the leaving chilled water temperature, providing the current limit setpoint is satisfied. If the compressor motor current exceeds the current limit setpoint, it will override the temperature control system to reduce unit capacity.

A one-second pulse corresponds to 100% full load amperes and an eleven-second pulse corresponds to 30% of full load amperes. The current limit setpoint varies linearly from 100% to 30% as the pulse-width changes from 1 to 11 seconds.

4.20.9 Remote Leaving Chilled Water Temperature Setpoint Reset - Analogue
(0-10 Vdc / 2-10 Vdc - J22 pins 3 & 5)
(0-20 mA / 4-20 mA - J22 pins 4 & 5)

This jumper (JP24) configureable input will adjust the leaving chilled water temperature up to 22.2°C upwards from the locally programmed value when the control panel is in the analogue 'REMOTE' operating mode. Refer to Field Control Modifications for details.

4.20.10 Remote Current Limit Setpoint - Analogue
(0-10 Vdc / 2-10 Vdc - J22 pins 1 & 5)
(0-20 mA / 4-20 mA - J22 pins 2 & 5)

This jumper (JP23) configureable input will set the motor current between 100% and 30% of full load amps when the control panel is in the analogue 'REMOTE' operating mode. Refer to Field Control Modifications for details.

4.21 Status Connections

Wiring to the status volt free contacts requires a supply provided by the customer. Particular care must be taken deriving the supplies for the volt free terminals with regard to a common point of isolation. These circuits when used must be fed via the common point of isolation so that the voltage is removed when the common point of isolation to the unit is opened.

In accordance with EN 60204 it is recommended that the customer wiring to these terminals uses orange wires. This will ensure that circuits not switched off by the unit supply disconnecting device are distinguished by colour so that they can easily be identified as live even when the unit disconnecting device is off.

Unless otherwise stated the volt-free contacts are rated at 5 amps resistive at 250 Vac and 30 Vdc, 2 amp inductive (0.4 pf) at 250 Vac and 30 Vdc. All inductive devices (relays) switched by the volt-free contacts must have their coil suppressed using standard R/C suppressors.

4.21.1 Remote Mode - Ready to Start
(TB2 terminals 26 & 27)

When closed, these contacts signify the control panel is in the 'REMOTE' operating mode, allowing the energy management system or the 'REMOTE START/STOP' contacts to control the unit.

4.21.2 Run Contacts
(TB2 terminals 35 & 36)

When closed these contacts signify that the unit is operating.

4.21.3 Anticipatory Alarm
(TB2 terminals 55 & 56)

When closed, these contacts signify that a 'WARNING' condition has occurred.

4.21.4 Cycling Shutdown
(TB2 terminals 40 & 41)

When closed, these contacts signify the unit is not permitted to start due to one or more cycling conditions. The cycling shutdown contacts function in all operating modes.

4.21.5 Safety Shutdown
(TB2 terminals 42 & 43)

When closed, these contacts signify the unit is not permitted to start due to one or more safety controls. A closure of the safety shutdown contacts means that the operator must manually reset and restart the unit. Safety shutdown contacts function in all operating modes.

4.22 Pump Control Connections

The control panel provides connections to allow automatic control of both the chilled and cooling liquid pumps.

4.22.1 Chilled Liquid Pump
(TB2 terminal 45 & TB6 terminal 2)

Connections are provided to allow automatic control of the chilled water pump motor starter by the control panel. The pump motor starter holding coil should be suitable for 115 Vac. The power requirement for the pump motor starter must be a maximum of 2 amps inductive. If power requirement exceeds this, a control relay of suitable rating should be used between the unit and the pump starter.

4.22.2 Cooling Liquid Pump
(TB2 terminal 151 & TB6 terminal 2)

Connections are provided to allow automatic control of the cooling water pump motor starter by the control panel. The pump motor starter holding coil should be suitable for 115 Vac. The power requirement for the pump motor starter must be a maximum of 1 amp holding and 10 amps inrush. If power requirement exceeds this, a control relay of suitable rating should be used between the unit and the pump starter.

4.23 Thermal Insulation

(See Product Drawings Form 160.81-PA1)

DO NOT field insulate until the unit has been leak tested under the supervision of the York representative.

Insulation of the type specified for the job, or minimum thickness to prevent sweating of 0°C (30°F) surfaces should be furnished (by others) and applied to the evaporator shell, end sheets, liquid feed line to flow chamber, compressor suction connection, and evaporator liquid heads and connections. The liquid head flange insulation must be removable, to allow head removal for the tube maintenance. Details of areas to be insulated are given on the Product Drawing.

Units are furnished factory anti-sweat insulated on order at additional cost. This includes all low temperature surfaces except the two (2) evaporator liquid heads.

4.24 Installation Check

After the unit is installed, piped and wired the services of a York representative should be requested to check the installation and supervise the initial start-up and operation on all chillers.

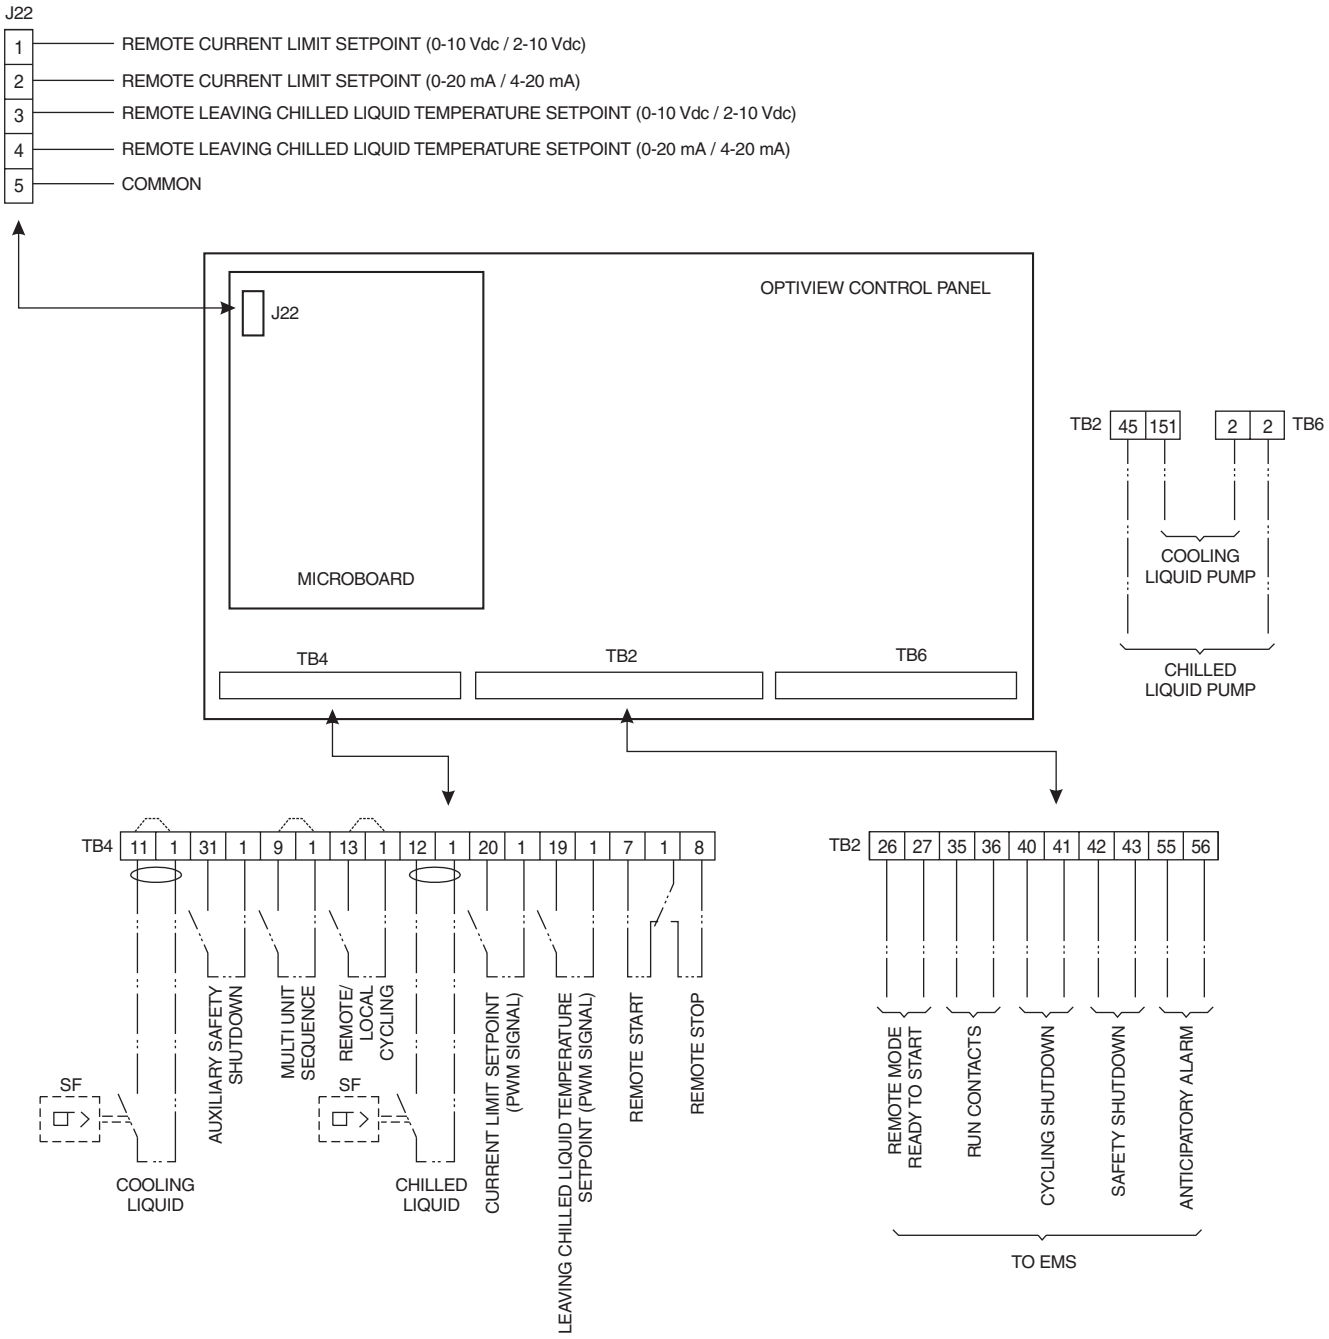
J22
1 REMOTE CURRENT LIMIT SETPOINT (0-10 Vdc / 2-10 Vdc)
2 REMOTE CURRENT LIMIT SETPOINT (0-20 mA / 4-20 mA)
3 REMOTE LEAVING CHILLED LIQUID TEMPERATURE SETPOINT (0-10 Vdc / 2-10 Vdc)
4 REMOTE LEAVING CHILLED LIQUID TEMPERATURE SETPOINT (0-20 mA / 4-20 mA)
5 COMMON
OPTIVIEW CONTROL PANEL
J22
MICROBOARD
TB4
TB2
TB6
TB2 45 151 2 2 TB6
COOLING LIQUID PUMP
CHILLED LIQUID PUMP
TB4 11 1 31 1 9 1 13 1 12 1 20 1 19 1 7 1 8
SF
COOLING LIQUID
CHILLED LIQUID
AUXILIARY SAFETY SHUTDOWN
MULTI UNIT SEQUENCE
REMOTE/ LOCAL CYCLING
CURRENT LIMIT SETPOINT (PWM SIGNAL)
LEAVING CHILLED LIQUID TEMPERATURE SETPOINT (PWM SIGNAL)
REMOTE START
REMOTE STOP
TB2 26 27 35 36 40 41 42 43 55 56
REMOTE MODE READY TO START
RUN CONTACTS
CYCLING SHUTDOWN
SAFETY SHUTDOWN
ANTICIPATORY ALARM
TO EMS

Note jumpers (⌒) should be removed when these contacts are used.

Figure 4.7 Customer Connections

5 COMMISSIONING

5.1 Preparation

Commissioning of this unit should only be carried out by York authorised personnel.

The Operating Instruction manual must be read in conjunction with this section.

Preparation - Power Off

The following checks should be made with the customer supply/supplies to the unit switched off.

Inspection: Inspect unit for installation damage. If found take action and/or repair as appropriate.

Valves: Open the oil separator valve, liquid line service valve, oil system, unloader and liquid injection service valves.

Compressor Coupling Alignment: Verify that the compressor drive coupling is correctly aligned.

Refrigerant Charge: Units are normally shipped as standard with a full refrigerant operating charge. Check that refrigerant is present and that no leaks are apparent (the refrigerant level should be in the middle of the evaporator sight glass). If no refrigerant is present a leak test must be undertaken, the leak(s) located and repaired. Repaired systems and units supplied with a nitrogen holding charge must be evacuated with a suitable vacuum pump/recovery unit as appropriate (refer to Section 7 for details).

Oil System: Check the oil system is correctly charged and the oil level is visible in the upper sight glass on the oil separator.

Isolation/Protection: Verify that all sources of electrical supply to the unit are taken from a single point of isolation.

Control Panel, Motor Terminal Box or Solid State Starter: Check the panels to see that they are free of foreign materials (wire, metal chips, etc.) and clean out if required.

Power Connections: Check the customer power cables are connected correctly.

Earthing: Verify that the units protective terminal(s) are properly connected to a suitable earthing point. Ensure that all unit internal earth connections are tight.

Supply voltage: Verify that the site voltage supply corresponds to the unit requirement and is within the limits given on the unit data plate.

The customers disconnection devices can now be set to ON.

The machine is now live!

Oil Heater: Verify the oil heater is energised for at least 24 hours prior to start-up.

Compressor Motor: Check the phase rotation sequence of the incoming supply corresponds to the required rotation for the motor.

Water/Glycol system(s): Verify that the cooling and chilled water systems have been installed correctly, and commissioned with the correct direction of water flow through the condenser and evaporator. Purge air from the top of the condenser and evaporator using the plugged air vents.

Flow switch(es): Verify a chilled water flow switch is correctly fitted in the customer's pipework on the evaporator outlet, and wired into the control panel.

Temperature sensor(s): Ensure the temperature sensors are coated with heat conductive compound (Part No. 013-00890-000) and inserted into the sensor pockets.

Programmed options: Verify that the options factory programmed into the control panel are in accordance with the customers order requirements. Refer to the Operating Instructions for details.

Programmed settings: Ensure the system setpoints, cut-outs and operational settings are in accordance with the instructions given in the Operating Instructions.

Date & time: Programme the date and time (see Operating Instructions).

Start/Stop schedule: Programme the daily and holiday start/stop (see Operating Instructions).

5.2 First Time Start-up

During the commissioning period there should be sufficient heat load to run the unit under stable full load operation to enable the unit controls, and system operation to be set up correctly and a commissioning log taken. Read the following section in conjunction with the control panel Operating Instructions and Section 6.

Interlocks: Verify that water is flowing through the evaporator and that heat load is present. Ensure that any remote run interlocks are in the run position and that the run schedule requires the unit to run or is overridden.

Start-up: Start the unit in accordance with Section 6 and be ready when the compressor starts to switch the unit off immediately if any unusual noises or other adverse conditions develop.

Operation: Check the system operating parameters are normal by selecting the various readouts of pressure, temperature, etc on the control panel.

Oil Level: After operation on full load for around half an hour, recheck the separator oil level. The level should be visible in the first stage sight glass. Add or drain oil as necessary to achieve this level. No oil level should be visible in the second stage sight glass.

Refrigerant Charge: If stable full load operation can be achieved at design conditions, then the refrigerant charge should be trimmed to give the correct split temperatures across the heat exchangers. The level this charge represents in the evaporator sight glass (after shutdown and temperature equalisation) should be recorded for reference.

6 OPERATION

CAUTION

If the oil heater is de-energised during a shutdown period, it must be energized for 24 hours prior to starting the compressor.

6.1 General

YR chillers are designed to work independently, or in conjunction with other equipment via a York ISN building management system or other automated control system. The compressor can be started and loaded as required using a range or input signals to achieve the desired cooling effect. This section describes the normal procedures for operation of the unit and should be read in conjunction with the control panel Operation Instruction.

6.2 Pre-Startup

Prior to starting the chiller, observe the control panel. Make sure the display reads **SYSTEM READY TO START**.

The internal clock, all the control setpoints and any other required settings, eg., daily schedule, should be programmed before the unit is started. (Refer to control panel Operation Instruction).

If the chilled water pump is manually operated, start the pump, the control panel will not allow the unit to start unless chilled liquid flow is established through the unit. If the chilled liquid pump is wired to the control panel the pump will automatically start.

6.3 Start-up (Refer to Figure 6.1)

1. To start the chiller, press the compressor **START** switch. This switch will automatically spring return to the **RUN** position. When the start switch is energised, the control panel is placed in an operating mode and any fault will be shown by a display message.

NOTE

Any faults which occur during STOP/RESET are also displayed.

NOTE

The slide valve is returned to the unload position automatically when the unit is shut down to prevent loading the compressor on start-up.

When the unit starts, the following automatic sequences are initiated: (Refer to Figure 6.1 Starting & Shutdown Sequence).

1. The control panel display message will read **START SEQUENCE INITIATED** for the starting sequence.

2. The measured oil and evaporator pressures are compared during system equalization so that any offset is stored for use in calculating deferential trip points during compressor operation.

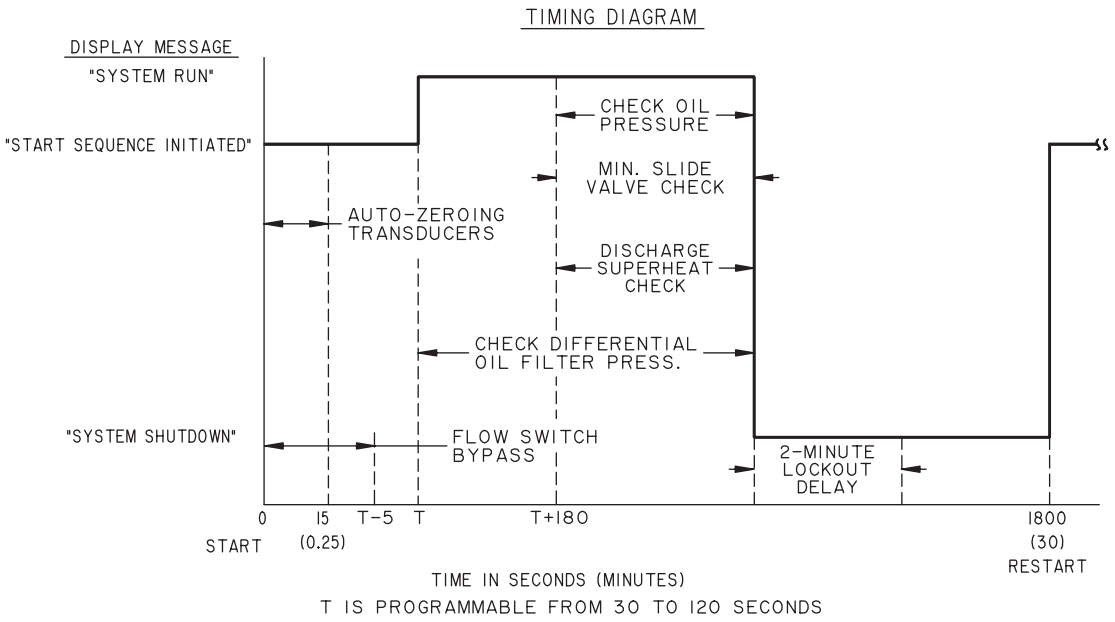

Figure 6.1 Starting and Shutdown Sequence

3. The chilled liquid pump contacts close starting the chilled liquid pump to allow liquid flow through the evaporator. The chilled water flow switch is bypassed until the last 5 seconds of the start sequence.

4. After T seconds of start sequence operation, the compressor will start.

5. When the motor reaches full speed and the current falls below 100% FLA the message will read: **LEAVING CHILLED LIQUID CONTROL**.

6. The anti-recycle timer begins after 30 seconds of the start sequence initiated time. The timer will run for 30 minutes after the compressor starts. If the unit shuts down during this period of time it cannot be started until the timer completes the 30 minute cycle.

For display messages and information pertaining to operation, refer to the control panel Operating Instruction.

6.4 Normal Operation

After the compressor reaches its operating speed the slide valve will begin to load, under the control of the control panel, based on the leaving chilled liquid temperature. The unit capacity will vary to maintain the leaving chilled liquid temperature at the programmed setpoint. A drop in chilled liquid temperature will cause the slide valve to unload to decrease unit capacity. When the chilled liquid temperature rises, the slide valve loads the compressor and increases the unit capacity.

The compressor motor current will be limited to a programmable maximum during the unit operation. The control panel can be programmed in various ways to limit the motor current to between 30 and 100% of Full Load Current as required (see the control panel Operation Instruction for more details).

While the compressor is running a wide variety of system parameters are monitored automatically by the control panel. These can be accessed and displayed as required via the control panel keypad and display. If any problems are detected the cause will be shown on the display and the appropriate action will be taken, eg reducing slide valve loading, giving a warning message, or shutting down the unit.

6.5 Shutdown

During normal operation the unit may shut down for a number of reasons such as low load, scheduled daily shutdowns and multi unit cycling. In each case the control panel display will indicate the reason for the shutdown. For example, if during operation the control panel has unloaded the compressor completely and load continues to fall, the unit will be shut down and the display will read: **LEAVING CHILLED LIQUID CONTROL - LOW TEMPERATURE**.

If the unit is shut down because a problem has been detected by the control panel, a similar type of message will be displayed indicating the nature of the problem (see control panel Operation Instruction, for more information).

When the unit is shutdown, the slide valve will close automatically to minimise load on the compressor motor during startup. A minimum of two minutes after shutdown is required for system pressure equalisation before the compressor will be allowed to restart.

6.6 Manual Shutdown

To stop the unit manually:

1. Press the compressor **STOP/RESET** switch. The control panel display will show: **SYSTEM LOCKOUT DELAY**. This prevents compressor restart until system equalization is achieved.

2. Stop the chilled water pump (if not wired into the control panel, in which case it will shut off automatically.)

3. Open the switch to the cooling tower fan motors, if used.

The compressor sump oil heater (thermostatically controlled) is energised when the unit is stopped.

6.7 Prolonged Shutdowns

If the unit is to be shut down for an extended period of time (for example, over the winter season), the following procedure should be followed:

1. If freezing temperatures are likely to be encountered while the system is idle, carefully drain the cooling water from the cooling tower, condenser, condenser pump, and the chilled water system, chilled water pump and evaporator. Open the drains on the evaporator and condenser liquid heads to assure complete drainage. If a Solid State Starter is fitted drain water from starter cooling loop.

2. Move the jumper on the microprocessor board to the OFF position to conserve the battery (see control panel Operation Instruction).

3. Open the main disconnect switches to the compressor motor, condenser water pump and the chilled water pump. Open the 115 Vac circuit to the control panel.

To return the unit to operation is the reverse of this procedure, however, after a prolonged shutdown it will be necessary to replace all of the oil and install a new oil filter element. This should only by done by suitably qualified personnel.

6.8 Operating Inspections

By following a regular inspection schedule any potential problems with the unit can be identified early and attended to before serious operating difficulties occur. The following list of inspections and procedures should be used as a guide. In all cases the inspections should only be carried out by properly trained personnel. If a problem is identified, no attempt should be made to carry out any repairs unless properly qualified and equipped to do so. Where appropriate, refer to the control panel Operation Instruction for correct keypad operation to access data on the control panel display.

Daily

1. **Check the bearing oil pressure**: The actual bearing oil pressure will vary with compressor suction and discharge pressures. When a new system is first operated under normal full load conditions, the bearing oil pressure should be recorded as a reference point with which to compare subsequent readings.

2. **Check Oil Pressure Display**: The oil and oil filter transducers are compared during compressor operation. If the differential filter pressure exceeds 138 kPa for 8 seconds, the message **WARNING - OIL - DIRTY FILTER** is displayed. If the differential filter pressure exceeds 172.5 kPa for 8 seconds, the unit shuts down and the displayed message is **OIL - CLOGGED FILTER**. A gradual decrease in bearing pressure of 30 to 60 kPa (with constant suction and discharge pressures) may be an indication of a dirty filter. The filter should be replaced when pressure loss is 30% of the original pressure.

3. **Check the oil level in the oil separator reservoir**: The correct oil level is half way up the sight glass but this may vary depending on load. The level should not disappear from the sight glass.

4. **Check entering and leaving condenser water temperatures and condenser pressure** for comparison with design conditions.

5. **Check the entering and leaving chilled liquid temperatures and evaporator pressure** for comparison with design conditions.

6. **Check the compressor discharge temperature**: During normal operation discharge temperature should not exceed 100°C.

7. **Check the compressor motor voltage and current**: At the Electro Mechanical Starter or on the control panel display for units with a Solid State Starter.

8. **Check for any signs of dirty or fouled condenser tubes**. The temperature difference between water leaving the condenser and the liquid refrigerant leaving the condenser should not exceed the difference recorded for a new unit by more than 2.2°C.

9. Check water treatment is correct.

10. Read any warning or safety shutdown messages displayed.

6.9 Operating Log Sheet

An accurate record of system operating conditions (temperatures and pressures) recorded at regular intervals throughout each 24 hour operating period should be kept. An optional status printer is available for this purpose using automatic data logging.

The record of readings serves as a valuable reference for operating the system. Readings taken when a system is newly installed will establish normal conditions with which to compare later readings. A sample log sheet is provided in Figure 6.2, listing the appropriate unit information which should be recorded regularly.

6.10 Maintenance and Service

Units are not generally user serviceable and no attempt should be made to rectify any faults found with the unit unless suitably qualified and equipped to do so. If the unit is malfunctioning in any manner, or the unit is stopped by one of the safety controls, consult Section 8. After repair or adjustment if the compressor cannot be started or the particular fault continues to affect the performance of the unit, please call the nearest York Office. Failure to report recurring problems or continued operation of a malfunctioning unit may lead to personal injury or damage to the unit.

6.10.1 Normal and Safety System Shutdowns

Normal and safety system shutdowns have been built into the unit to protect it from damage during certain operating conditions. The unit will be stopped automatically by controls that respond to high temperatures, low temperatures, and low and high pressures, etc. These safety shutdowns require the operator to manually reset the control panel prior to restarting the unit.

Date								
Time								
Hour Meter Reading								
Outside Ambient Temperature			DB deg C					
			WB deg C					
Compressor	Oil Level		SG U/L %					
	Oil Pressure		bara					
	Oil Temperature		deg C					
	Suction Temperature		deg C					
	Discharge Temperature		deg C					
	Oil Filter Differential Pressure		bar					
	Slide Valve Position		%					
Motor	Line Voltage		volts					
	Current		amps					
Evaporator	Refrigerant Pressure		bara					
	Chilled Liquid	Inlet Temperature	deg C					
		Outlet Temperature	deg C					
		Inlet Pressure	kPa					
		Outlet Pressure	kPa					
		Flow Rate	ltr/s					
Condenser	Refrigerant Pressure		bara					
	Liquid Outlet Temperature		deg C					
	Water	Inlet Temperature	deg C					
		Outlet Temperature	deg C					
		Inlet Pressure	kPa					
		Outlet Pressure	kPa					
		Flow Rate	ltr/s					

Figure 6.2 Log Sheet

7 MAINTENANCE

The Safety Section of this manual should be read carefully before attempting any maintenance operations on the unit. This section should be read in conjunction with the control panel Operation Instruction.

The units have been designed to operate continuously provided they are regularly maintained and operated within the limitations given in this manual. Each unit should be included in a routine schedule of daily inspection checks by the operator/customer (see Section 6), backed up by regular service inspection and maintenance visits by a suitably qualified Service Engineer.

It is entirely the responsibility of the owner to provide for these regular maintenance requirements and/or enter into a maintenance agreement with York International to protect the operation of the unit. If damage or a system failure occurs due to improper maintenance during the warranty period, York shall not be liable for costs incurred to return the unit to satisfactory condition.

This maintenance section applies only to the basic YR unit and may, on individual contracts, be supplemented by additional requirements to cover any modifications or ancillary equipment as applicable.

7.1 Scheduled Maintenance

The table on the following page lists the regular maintenance operations which should be carried out by a suitably qualified Service Engineer.

The interval necessary between each 'minor' and 'major' service can vary depending on, for example, application, site conditions and expected operating schedule. Normally a 'minor' service should be carried out every three to six months and a 'major' service at least once a year. It is recommended, however, that York Service is contacted for recommendations for individual sites.

7.1.1 Check the oil and refrigerant levels - Weekly

The refrigerant charge level is correct when the measured evaporator approach and discharge refrigerant gas superheat are within the values listed in the table below.

COMFORT COOLING APPLICATIONS	
Evaporator Approach	0.6 to 2.8°C
Discharge Superheat	6.7 to 10.0°C
GLYCOL (ICE MAKING) APPLICATIONS	
Evaporator Approach	2.2 to 4.4°C
Discharge Superheat	13.3 to 20.0°C

The chiller must be at design operating conditions and full load operation before the correct refrigerant charge level can be properly determined.

Liquid refrigerant will be visible in the evaporator sight glass. The refrigerant level cannot be properly determined by viewing the liquid refrigerant level in the evaporator sight glass.

All YR Chillers shipped in Form 1 are charged with the correct amount of refrigerant. Under some operating conditions the chiller may appear to be overcharged or undercharged with refrigerant. Consult with the YORK Factory prior to removing or adding refrigerant. The liquid line isolation valve may have to be partially throttled to prevent overfeeding the evaporator in some applications and under certain operating conditions.

Definitions:

Evaporator Approach = (S.E.T) - (L.E.L.T)
Discharge Superheat = (C.D.G.T) - (S.C.T)

Where:

S.E.T. = Saturated Evaporator Temperature
L.E.L.T. = Leaving Evaporator Liquid Temperature
C.D.G.T. = Compressor Discharge Gas Temperature
S.C.T. = Saturated Condensing Temperature

These values can be obtained from the OptiView control panel. Refer to the Operating Instructions, 160.81-OI.

A visual check is sufficient to verify the oil level. Two sight glasses are part of the oil separator and should be used to determine the proper operating oil level.

The upper sight glass should have liquid oil visible in the sight glass with the chiller off and the oil at 40 to 46°C. When the chiller is in operation, the oil level may be different from the standby condition, due to the turbulence created by the discharge gas in the oil separator.

7.2 Special Maintenance Requirements

In addition to the regular maintenance schedule, there are some further special requirements for maintenance of the unit based on the number of operating hours from initial start-up:

At 200 hours of operation:

- Check operating temperatures / pressures
- Check chemical condition of oil
- Change oil filter elements
- Change oil return strainers
- Check drive coupling
- Check compressor / motor alignment
- Check vibration levels

At 1000 hours of operation:

- Check operating temperatures / pressures

At 5000 hours of operation:

- Check operating temperatures / pressures
- Check chemical condition of oil
- Change oil filter elements
- Change oil return strainers
- Change oil
- Check drive coupling
- Check compressor / motor alignment

At 50,000 hours of operation:

- Compressor internal inspection

For practical reasons it is not necessary to carry out these maintenance operations at the exact operating hours specified. The work should, however, be carried out slightly before rather than after the specified hours.

The calendar time taken to reach the number of operating hours specified above will vary significantly depending on operating schedule. If a maintenance operation given above closely coincides with, or has been recently been completed as, part of the regular scheduled maintenance then the operation need not be repeated.

7.3 Regular Maintenance Operations

Service Schedule	MINOR SERVICE (3 - 6 monthly) *	MAJOR SERVICE (6 - 12 monthly) * All items under Minor Service plus:
General	Check thermal insulation Check vibration isolators	Check main structure Check paint-work Check vibration levels
Refrigerant Systems	Check relief valves Check for pipework damage Check for leaks Check operating temps./press. Check suction superheat Check liquid subcooling	Pressure test complete system Check chemical condition of system
Oil System	Check oil level Check oil pressure Check oil differential pressure Change oil filter element Check eductor nozzles Change oil return strainers Check oil heater Check chemical condition of oil	Change oil Check solenoid valves
Compressor	Check unloader operation	Check drive coupling Check compressor / motor alignment
Drive Motor	Check mounting bolts	Clean air passages Clean windings Megger test Lubricate bearings
Evaporator & Condenser		Clean water strainers Check tubes Check end sheets Mechanically brush condenser tubes. Verify evaporator and condenser water flow rates against design conditions.
Power & Control System	Check panel condition Check mains and control wiring Check sensors Check mechanical HP cut-outs Check emergency stop Check 3-phase voltage and current balance	Check all connections Check compressor contactors / SSS Check sensor / transducer calibration Check motor protectors
Microcomputer	Check fault history Check program settings Check HP / LP cut-out functions Check load / unload function	Check ambient cut-out function Check low oil pressure function

* Service interval depends on operational requirements - please contact York for individual site recommendations .

7.4 Oil Filters and Driers

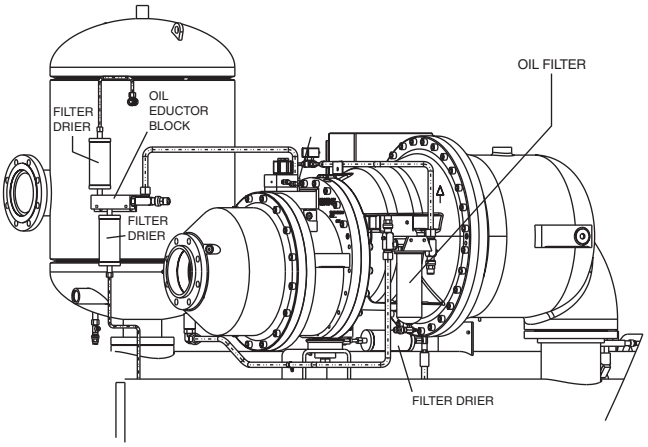

Figure 7.1 Filters and Filter Driers

A single oil filter is provided as standard equipment and dual oil filter arrangements are available as optional equipment. The oil filter(s) are a replaceable 3 micron cartridge type oil filter. Use only YORK approved oil filter elements.

The oil filter element should be changed after the first 200 hours of operation and then as necessary thereafter. Change the oil filter element before the differential pressure reaches 1 bar. Always replace the oil filter element and O-ring on a yearly maintenance schedule.

The YORK control panel will automatically display the message **WARNING - OIL - DIRTY FILTER** when the differential pressure reaches 138 kPa across the oil filter. A safety shutdown will be initiated if the oil pressure differential pressure reaches 172.5 kPa. The control panel will display the message **OIL - CLOGGED FILTER**.

The filter driers should be changed annually or when excessive amount of oil is indicated in the refrigerant charge.

7.4.1 Single Oil Filter Replacement

The chiller must be OFF. Turn the rocker switch to the OFF position; turn the circuit breaker to the off position to prevent the chiller from being accidentally started.

1. Close the hand isolation valves on the inlet and outlet oil lines going to and from the oil filter.

2. Relieve the refrigerant pressure and oil in the oil filter and the oil lines through the pressure access port fitting, located on the top of the filter housing. Connect a refrigeration pressure hose to the pressure access port and drain the oil and refrigerant into a suitable refrigerant recovery container.

3. Position a container to collect the oil (less than 1.9 litres). Loosen and remove the drain nut at the bottom of the oil filter housing; drain the oil into the container.

4. Unscrew the oil filter bowl locking nut.

5. Remove the oil filter element.

6. Install a new element.

7. Install a new O-ring on the top of the oil filter bowl.

8. Tighten the oil filter bowl locking nut.

9. Evacuate the air from the oil filter to 500 microns PSIG.

10. Open the hand isolation valves.

11. The chiller is ready to be restarted.

7.4.2 Dual Oil Filters

The dual oil filter option allows one oil filter to be isolated and changed with the chiller in operation.

1. Open the hand isolation valves on the idle filter.

2. Close the hand isolation valves on the filter to be changed.

3. Follow the instructions for changing the single oil filter beginning at step 2.

4. This can now be the idle filter and the chiller can be operated with the current oil filter.

7.4.3 Filter Drier Replacement

When the filter driers require changing the chiller must be shut off.

1. Close the service isolation valves identified in schematic drawing, see Figure 2.2.

2. Carefully remove the insulation on the filter driers located on the eductor block.

3. Relieve the pressure from the circuit using the pressure access fitting located on the side of the eductor block. Connect a refrigeration pressure hose to the pressure access port and drain the oil and refrigerant into a suitable refrigerant recovery container.

4. Loosen the Rota-Lock® Nuts at each end of the filter driers. Remove the filter driers.

5. Teflon® seal washers are used to seal the filter drier connections. These washers must be replaced when the filter driers are replaced.

6. Tighten the Rota-Lock® Nuts at each end of the three filter driers to a torque of 60 ft.-lb.

7. Evacuate the air from the oil filter to 500 microns PSIG.

8. Open the five hand isolation valves. The chiller is now ready to be placed back into service.

7.5 Oil Charging

T0 and T1 compressors require approximately 41 litres of oil. The actual amount of oil required depends on the compressor/ separator combination and the condition of the refrigerant. The actual operating level in the separator should be kept from exceeding the top of the highest sight port. All units use York Grade 'H' oil.

7.5.1 Oil charging procedure

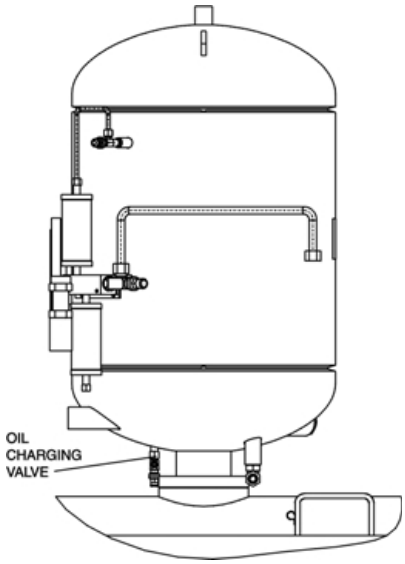

Figure 7.2 Charging Oil

The oil should be charged into the oil separator using the York Oil Charging Pump (Part No. 070- 10654).

To charge oil proceed as follows:

1. If the oil charging is to restore the correct oil level the unit may be kept in operation. If the oil charge is being replaced the unit must be shut down and the supply switched off to prevent operation of the oil heater.

2. Immerse the suction connection of the oil charging pump in a clean container of new oil and connect the pump discharge connection to the oil charging valve. Do not tighten the connection at the charging valve until after the air is forced out by pumping a few strokes of the oil pump. This fills the lines with oil and prevents air from being pumped into the system.

3. Open the oil charging valve and pump oil into the system until oil level in the oil separator is about midway in the upper sight glass. Then, close the charging valve and disconnect the hand oil pump.

4. The immersion oil heater will maintain the oil temperature between 40°C and 46°C.

Draining the oil

1. If the oil draining is to restore the correct oil level the unit may be kept in operation. If the oil charge is being replaced the unit must be shut down and the supply switched off to prevent operation of the oil heater.

2. If possible run the unit at full load for a short period to recover most of the oil in the system to the oil separator.

3. Drain the oil into a suitable container from the oil charging valve on the bottom of the oil separator.

4. Dispose of old oil according to local regulations for the disposal of oily wastes.

7.6 Refrigerant Charge

The refrigerant system is pressure tested and evacuated at the factory.

7.6.1 Checking The Refrigerant Charge

See para. 7.1.1.

7.6.2 Leak Testing

After the system has been charged, the system should be carefully leak tested with a R134a compatible leak detector to ensure all joints are tight.

If any leaks are indicated, they must be repaired immediately. Usually, leaks can be stopped by tightening flare nuts or flange bolts. However, for any major repair, the refrigerant charge must be removed.

7.6.3 Vacuum Testing

Vacuum testing should be conducted as follows:

1. Connect a high capacity vacuum pump, with indicator, to the system charging valve and start the pump.

2. Open wide all system valves. Be sure all valves to the atmosphere are closed.

3. Operate the vacuum pump until a wet bulb temperature of 0°C or a pressure of 5 mm Hg (absolute) is reached.

4. To improve evacuation circulate warm water (not to exceed 50°C) through the evaporator and condenser tubes to thoroughly dehydrate the shells. If a source of hot water is not readily available, a portable water heater should be employed. **DO NOT USE STEAM**. A suggested method is to connect a hose between the source of hot water under pressure and the evaporator head drain connection, out the evaporator vent connection, into the condenser head drain and out the condenser vent. To avoid the possibility of causing leaks, the temperature should be brought up slowly so that the tubes and shell are heated evenly.

5. Close the system charging valve and the stop valve between the vacuum indicator and the vacuum pump. Then disconnect the vacuum pump leaving the vacuum indicator in place.

6. Hold the vacuum in the system for 8 hours; the slightest rise in pressure indicates a leak or the presence of moisture, or both. If, after 8 hours the wet bulb temperature in the vacuum indicator has not risen above 4.4°C or a pressure of 6.3 mm Hg, the system may be considered tight.

Be sure the vacuum indicator is valved off while holding the system vacuum and be sure to open the valve between the vacuum indicator and the system when checking the vacuum after the 8 hour period.

7. If the vacuum does not hold for 8 hours within the limits specified, the leak must be found and repaired.

7.6.4 Refrigerant Charging

When opening any part of the refrigerant system for repairs, the refrigerant charge must be removed. If the chiller is equipped with optional valves, the refrigerant can be isolated in either the condenser or evaporator / compressor while making repairs.

To prevent liquid freezing within the evaporator tubes when charging an evacuated system, only refrigerant vapour must be added to the system until the system pressure is raised above the point corresponding to the freezing point of the evaporator liquid. For water, the pressure corresponding to the freezing point is 58.9 kPa for R134a (at sea level).

While charging, care must be taken to prevent moisture laden air from entering the system.

Make up a suitable charging connection from new copper tubing to fit between the system charging valve and the fitting on the charging drum. This connection should be as short as possible but long enough to permit sufficient flexibility for changing drums. The charging connection should be purged each time a new container of refrigerant is connected and changing containers should be done as quickly as possible to minimise the loss of refrigerant.

7.7 Evaporator and Condenser

Maintenance of condenser and evaporator shells is important to provide trouble free operation of the chiller. The water side of the tubes in the shell must be kept clean and free from scale. The following recommendation should be followed in determining the condition of the water side of the condenser and evaporator tubes.

1. The condenser tubes should be cleaned annually or earlier if conditions warrant. If the temperature difference between the water off the condenser and the condenser liquid temperature is more than 4° greater than the difference recorded on a new unit, it is a good indication that the condenser tubes require cleaning.

2. The evaporator tubes under normal circumstances will not require cleaning. If however the temperature difference between the refrigerant and the chilled water increases slowly over the operating season, it is an indication that the evaporator tubes may be fouling or that there may be a water by-pass in the water box requiring gasket replacement or refrigerant may have leaked from the chiller.

7.7.1 Chemical Water Treatment

Since the mineral content of the water circulated through the evaporator and condenser varies with almost every source of supply, it is possible that the water being used may corrode the tubes or deposit heat resistant scale in them. Reliable water treatment will greatly reduce the corrosive and scale forming properties of almost any type of water.

As a preventive measure against scale and corrosion and to prolong the life of evaporator and condenser tubes, a chemical analysis of the water should be made preferably before the system is installed. A water treatment expert should be consulted to determine whether water treatment is necessary, and if so, to furnish the proper treatment for the particular water condition.

7.7.2 Tube Cleaning

Evaporator

It is difficult to determine by any particular test whether possible lack of performance of the water evaporator is due to fouled tubes alone or due to a combination of troubles. Trouble which may be due to fouled tubes is indicated when, over a period of time, the cooling capacity decreases and the split (temperature difference between water leaving the evaporator and the refrigerant temperature in the evaporator) increases. A gradual drop-off in cooling capacity can also be caused by a gradual leak of refrigerant from the system or by a combination of fouled tubes and shortage of refrigerant charge. An excessive quantity of oil in the evaporator can also contribute to erratic performance.

Condenser

Condenser trouble due to fouled tubes is usually indicated by a steady rise in head pressure, over a period of time, accompanied by a steady rise in condensing temperature, and noisy operation. These symptoms may also be due to foul gas build-up. Purging will remove the foul gas revealing the effect of fouling.

Tube Fouling

Fouling of the tubes can be due to deposits of two types as follows:

1. **Rust or sludge** - which finds its way into the tubes and accumulates there. This material usually does not build up on the inner tube surfaces as scale, but does interfere with the heat transfer. Rust or sludge can generally be removed from the tubes by a thorough brushing process.
2. **Scale** - due to mineral deposits. These deposits, even though very thin and scarcely detectable upon physical inspection, are highly resistant to heat transfer. They can be removed most effectively by circulating an acid solution through the tubes.

7.7.3 Tube Cleaning Procedures

Brush Cleaning of Tubes

If the tube consists of dirt and sludge, it can usually be removed by means of the brushing process. Drain the water sides of the circuit to be cleaned (cooling water or chilled water) remove the heads and thoroughly clean each tube with a soft bristle bronze or nylon brush. **DO NOT USE A STEEL BRISTLE BRUSH**. A steel brush may damage the tubes.

Improved results can be obtained by admitting water into the tube during the cleaning process. This can be done by mounting the brush on a suitable length of 1/8" pipe with a few small holes at the brush end and connecting the other end by means of a hose to the water supply.

The tubes should always be brush cleaned before acid cleaning.

Acid Cleaning of Tubes

If the tubes are fouled with a hard scale deposit, they may require acid cleaning. It is important that before acid cleaning, the tubes be cleaned by the brushing process described above. If the relatively loose foreign material is removed before the acid cleaning, the acid solution will have less material to dissolve and flush from the tubes with the result that a more satisfactory cleaning job will be accomplished with a probable saving of time.

Acid cleaning should only be performed by an expert. Please consult your local water treatment representative for assistance in removing scale build-up and preventative maintenance programs to eliminate future problems.

7.7.4 Tube Leaks

Evaporator and condenser tube leaks may result in refrigerant leaking into the water circuit, or water leaking into the shell depending on the pressure levels. If refrigerant is leaking into the water, it can be detected at the liquid head vents after a period of shutdown. If water is leaking into the refrigerant, system capacity and efficiency will drop off sharply.

If a tube is leaking and water has entered the system, the evaporator and condenser should be valved off from the rest of the water circuit and drained immediately to prevent severe rusting and corrosion. The refrigerant system should then be drained and purged with dry nitrogen to prevent severe rusting and corrosion. If a tube leak is indicated, the exact location of the leak may be determined as follows:

1. Remove the heads and listen at each section of tubes for a hissing sound that would indicate gas leakage. This will assist in locating the section of tubes to be further investigated. If the probable location of the leaky tubes has been determined, treat that section in the following manner (if the location is not definite, all the tubes will require investigation).

2. Wash off both tube heads and the ends of all tubes with water.

3. With nitrogen or dry air, blow out the tubes to clear them of traces of refrigerant laden moisture from the circulation water. As soon as the tubes are clear, a cork should be driven into each end of the tube. Pressurise the dry system with 3.5 to 6.9 barg of nitrogen. Repeat this with all of the other tubes in the suspected section or, if necessary, with all the tubes in the evaporator or condenser. Allow the evaporator or condenser to remain corked up to 12 to 24 hours before proceeding. Depending upon the amount of leakage, the corks may blow from the end of a tube, indicating the location of the leakage. If not, it will be necessary to make a very thorough test with the leak detector.

4. After the tubes have been corked for 12 to 24 hours, it is recommended that two men working at both ends of the evaporator carefully test each tube – one man removing corks at one end and the other at the opposite end to remove corks and handle the leak detector. Start with the top row of tubes in the section being investigated. Remove the corks at the ends of one tube simultaneously and insert the exploring tube for 5 seconds – this should be long enough to draw into the detector any refrigerant gas that might have leaked through the tube walls. A fan placed at the end of the evaporator opposite the detector will assure that any leakage will travel through the tube to the detector.

5. Mark any leaking tubes for later identification.

6. If any of the tube sheet joints are leaking, the leak should be indicated by the detector. If a tube sheet leak is suspected, its exact location may be found by using a soap solution. A continuous buildup of bubbles around a tube indicates a tube sheet leak.

7.7.5 In-Service Inspection

There is no corrosion on the refrigerant side therefore in-service inspection on the refrigerant side is not necessary.

For the water side, if the water used is treated in accordance with the recommendations given in this manual, in-service inspection is not necessary.

York International believes that periodic in service proof testing (e.g.; hydro tests) is not required. However, York International recognises that national regulations may require such testing to be conducted.

7.8 Electrical Controls

1. All electrical controls should be inspected for obvious malfunctions.

2. It is important that the factory settings of controls (operation and safety) are not changed. If the settings are changed without York approval, the warranty will be invalidated.

7.9 Testing Motor Winding Insulation

With the main disconnect switch and compressor motor starter open, test the motor as follows:

1. Test the insulation, using a megohm meter (megger), between phases and each phase and ground as shown; these readings are to be interpreted using the graph shown in below.

2. If readings fall below shaded area, remove external leads from motor and repeat test.

NOTE

Motor is to be megged with the starter at ambient temperature after 24 hours of idle standby.

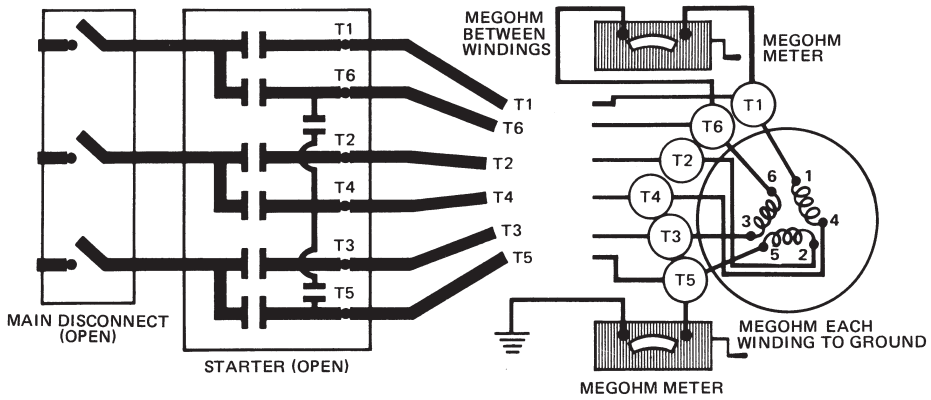

Minimum Insulation Resistance vs. Temperature (per IEEE Std 43)

1. Megohm readings should be taken after Megohm voltage has been applied one minute.
2. If insulation resistance lies to the right of the applicable curve, the motor is acceptable for use.
3. If insulation resistance lies to the left of the applicable curve, the motor should not be run. The motor should be heated to 250°F in an effort to remove moisture and obtain an acceptable reading at room ambient. This can be done either by baking in a forced hot air oven or, if proper voltage is available, apply 5 - 10% of rated voltage to motor windings.
4. Any gradual or abrupt decrease in Megohm readings over an extended period of time is an indication of deterioration of insulation and/or moisture absorption or oil/dirt contamination.
5. Megohm readings of individual phase coils of 200 - 600V motors should be made with coils not under test being grounded.

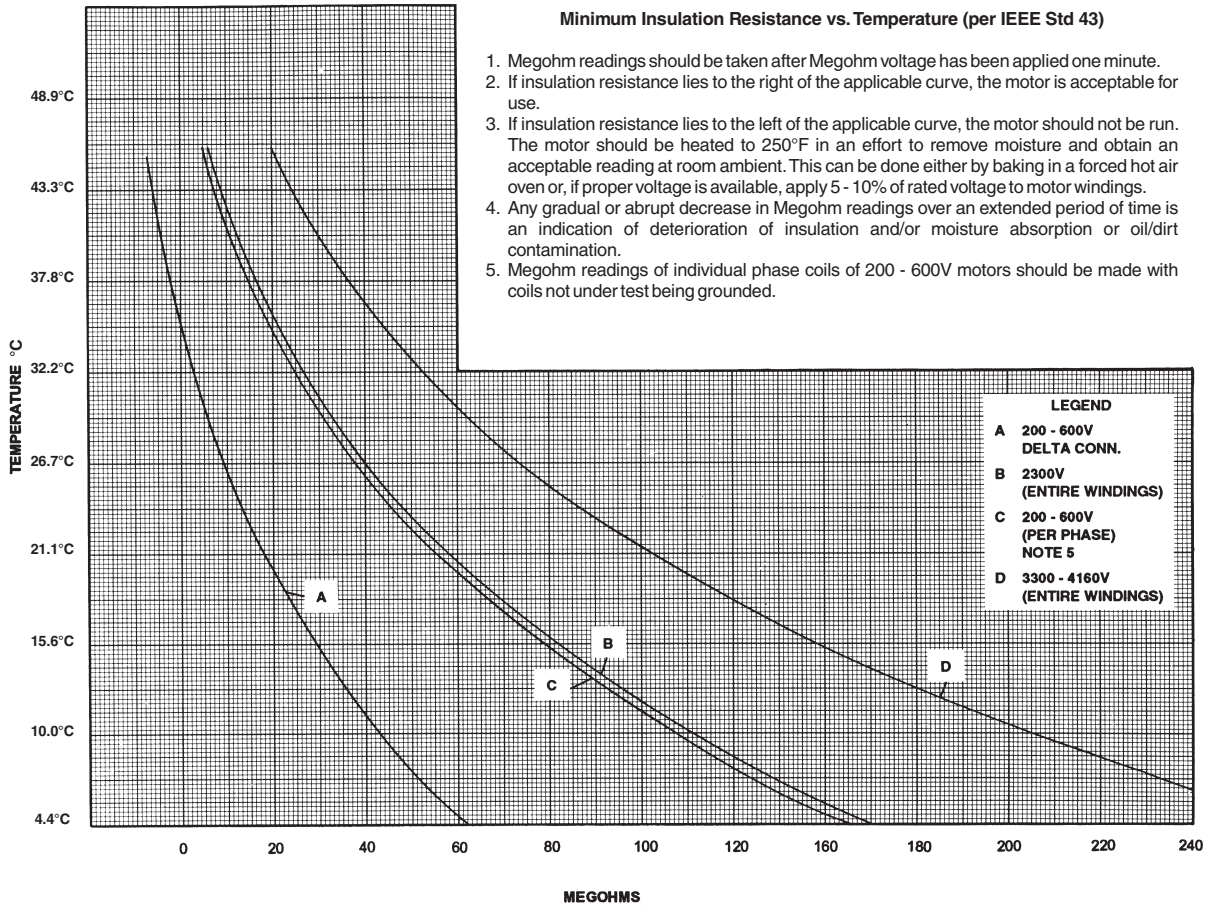

Page Left Intentionally Blank

8 TROUBLE SHOOTING

8.1 General Requirements

Units are not generally user serviceable and no attempt should be made to rectify any faults found with the unit unless suitably qualified and equipped to do so. If in any doubt, contact your local York Agent. To avoid personal injury or possible damage to the unit, the trouble shooting information given in the following section must only be used by competent service personnel using correct procedures and equipment.

8.2 Trouble Shooting

In any case where the control panel detects conditions or control functions requiring the unit to stop, it will shut down the unit and display the reason for the shutdown.

Most shutdowns will be due to normal cycling of the unit due to lack of load, scheduled off cycles etc., but others may be caused by an internal or external fault detected by the control panel. For a full description of the operation of each of these shutdown functions refer to the control panel Operation Instruction.

In the case of shutdowns caused by cycling contacts, or by other conditions unlikely to cause an ongoing problem, the control panel will automatically restart the unit as soon as the contacts or conditions allow the unit to run. If, however, this type shutdown occurs unexpectedly or repeatedly, a problem may exist which requires attention.

For shutdowns caused by conditions which may lead to damage to the unit, the control panel will require a manual reset before allowing a restart. In this situation it is essential to determine the exact cause of the shutdown and rectify the problem before putting the unit back into service.

Some operating conditions are not monitored by the control panel such as compressor wear, oil condition, water treatment levels, etc. Detection of any potential problems caused by these conditions relies on daily monitoring of the unit and by regular service inspections - see Sections 6 & 7.

The possible causes and recommended actions listed in these tables should be used for guidance only and should not be considered exhaustive.

Fault	Possible Cause	Remedy
Abnormally High Discharge Pressure		
Temperature difference between condensing temperature and condenser leaving liquid temperature higher than normal.	Air in condenser.	Bleed cooling water circuit.
High discharge pressure.	Condenser tubes dirty or scaled.	Clean condenser tubes. Check water treatment.
	High condenser water temperature.	Reduce condenser water inlet temperature. (Check cooling tower and water circulation.)
Temperature difference between condenser entering liquid and condenser leaving liquid higher than normal, with normal evaporator pressure.	Insufficient condensing water flow.	Increase the water flow through the condenser to correct value.
Abnormally Low Suction Pressure		
Temperature difference between leaving chilled water and refrigerant in evaporator greater than normal with high discharge temperature.	Insufficient charge of refrigerant.	Check for leaks and charge refrigerant into system.
	Variable orifice problem.	Remove obstruction.
Temperature difference between leaving chilled water and refrigerant in the evaporator greater than normal with normal discharge temperature.	Evaporator tubes dirty or restricted.	Clean evaporator tubes.

Fault	Possible Cause	Remedy
Temperature of chilled water too low with low motor current.	Insufficient load for system capacity.	Check slide valve operation and setting of low water temperature cut-out.
High Evaporator Pressure		
High chilled water temperature.	Slide valves fail to open.	Check the slide valve solenoid valve.
	System overload.	Be sure that the slide valve is fully open (without overloading the motor) until the load decreases.
Compressor Starts, Normal Oil Pressure Develops, Fluctuates for Short While, then Compressor Stops on Oil Pressure Cut-out		
Oil pressure normal, fluctuates then compressor stops on Oil Pressure Cut-out. Display reading: **LOW OIL PRESSURE**	Unusual starting conditions exist, i.e., oil foaming in reservoir and piping due to lowered system pressure.	Drain the oil from the compressor and charge new oil into the compressor. (Refer to “Oil Charging Procedure).
	Burned out oil heater.	Replace oil heater.
Oil Pressure Gradually Decreases (Noted by Observation of Daily Log Sheets)		
Oil pressure drops to 70% of oil pressure when compressor was originally started.	Oil filter is dirty.	Change oil filter.
	Extreme bearing wear.	Inspect compressor.
Oil Pressure System Ceases to return an Oil/Refrigerant Sample		
Oil refrigerant return not functioning.	Filter-drier in oil return system dirty.	Replace old filter-drier with new.
	Jet or orifice of oil return jet clogged.	Remove jet, inspect for dirt. Remove dirt using solvent and replace.
System Fails to deliver Oil Pressure		
No oil pressure registers.	Faulty oil pressure transducer. Faulty wiring/connectors.	Replace oil pressure transducer.

9 TECHNICAL DATA

9.1 Dimensions

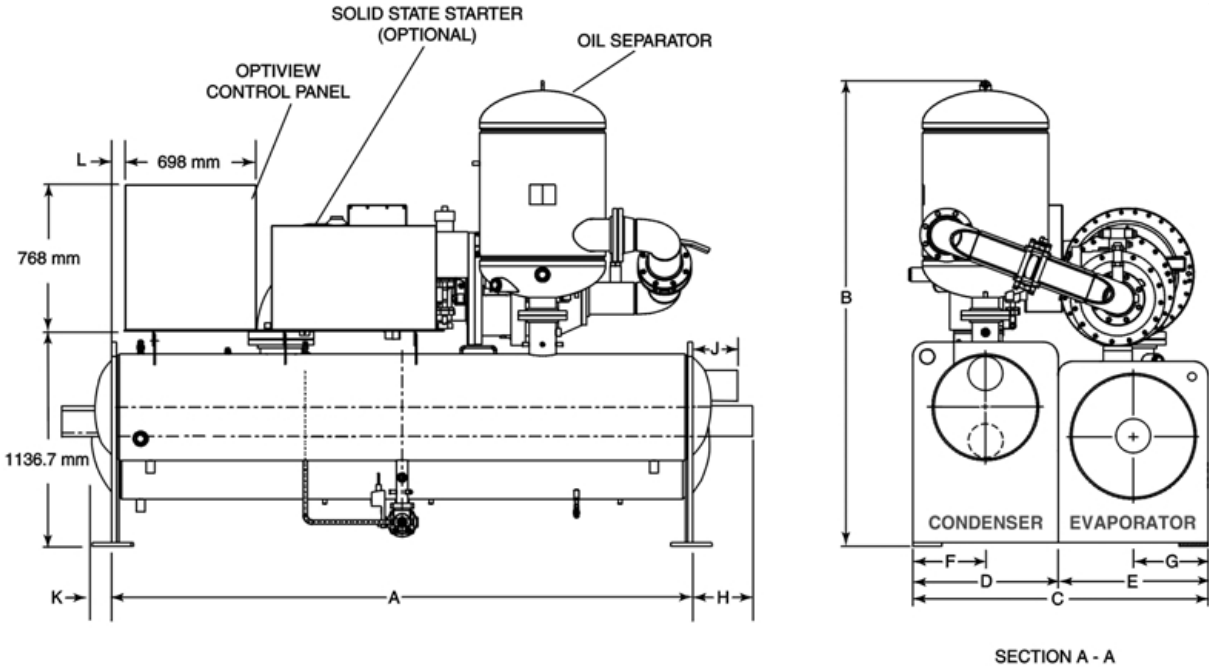

Overall Dimensions - T0 and T1 Compressor

	T0 and T1 COMPRESSOR	
	SHELL CODES - (Evaporator-Condenser)	
DIM.	T-T	V-V
A	3,048	4,267
B	2,445	2,445
C	1,550	1,550
D	762	762
E	787	787
F	381	381
G	394	394
L	70	190

Dimensions in mm

	EVAPORATOR CODES T & V			CONDENSER CODES T & V		
DIM.	1 PASS	2 PASS	3 PASS	1 PASS	2 PASS	3 PASS
H	375	343	343	—	—	—
J	—	—	—	375	318	318
	REAR HEAD 2 PASS			REAR HEAD 2 PASS		
K	222			194		

Dimensions based on Victaulic connection. Add 6 mm to each compact water box with optional flanged nozzles.

Notes

1. Unit height includes steel mounting plates under tube sheets. To determine overall installed height, add 22 mm for neoprene isolators (25 mm for optional spring isolators).

2. Determine overall unit length by adding water box depth to tube sheet length.

3. All dimensions are approximate. Certified dimensions are available on request.

9.2 Solid State Starter Details (Optional)

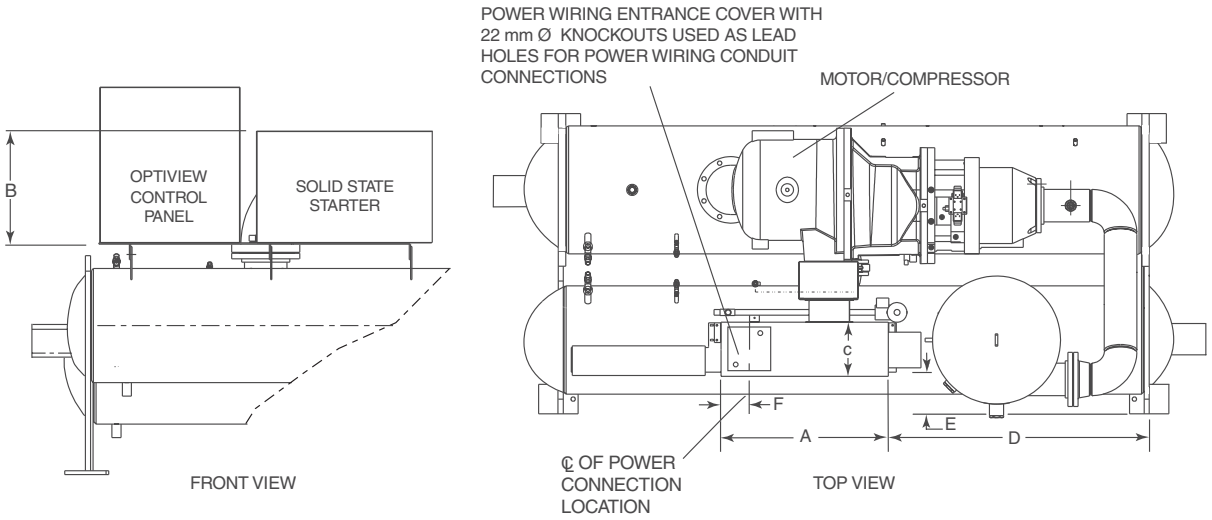

Model/Dim.	A	B	C	D	E	F	**Weight** (kg)
7LK & 14LK	864	543	280	1397	168	138	200
26LK & 33LK	889	645	305	1397	140	151	200

9.3 Weights

SHELL CODE EVAPORATOR-CONDENSER	SHIPPING WEIGHT (KG)	OPERATING WEIGHT (KG)	REFRIGERANT CHARGE (KG)	LOADING PER ISOLATOR (KG)
TB-TB	5,380	5,925	272	1,480
TB-TC	5,400	5,965	272	1,490
TB-TD	5,450	6,030	272	1,510
TC-TB	5,425	5,990	272	1,495
TC-TC	5,450	6,030	272	1,510
TC-TD	5,495	6,100	272	1,525
TD-TB	5,475	6,060	272	1,515
TC-TC	5,500	6,100	272	1,525
TD-TD	5,540	6,170	272	1,540
VB-VB	5,750	6,495	408	1,625
VB-VC	5,785	6,555	408	1,640
VB-VD	5,845	6,649	408	1,665
VC-VB	5,815	6,586	408	1,645
VC-VC	5,850	6,645	408	1,665
VC-VD	5,910	6,735	408	1,685
VD-VB	5,890	6,690	408	1,675
VD-VC	5,930	6,755	408	1,690
VD-VD	5,990	6,845	408	1,710

9.4 Process and Instrumentation Diagram

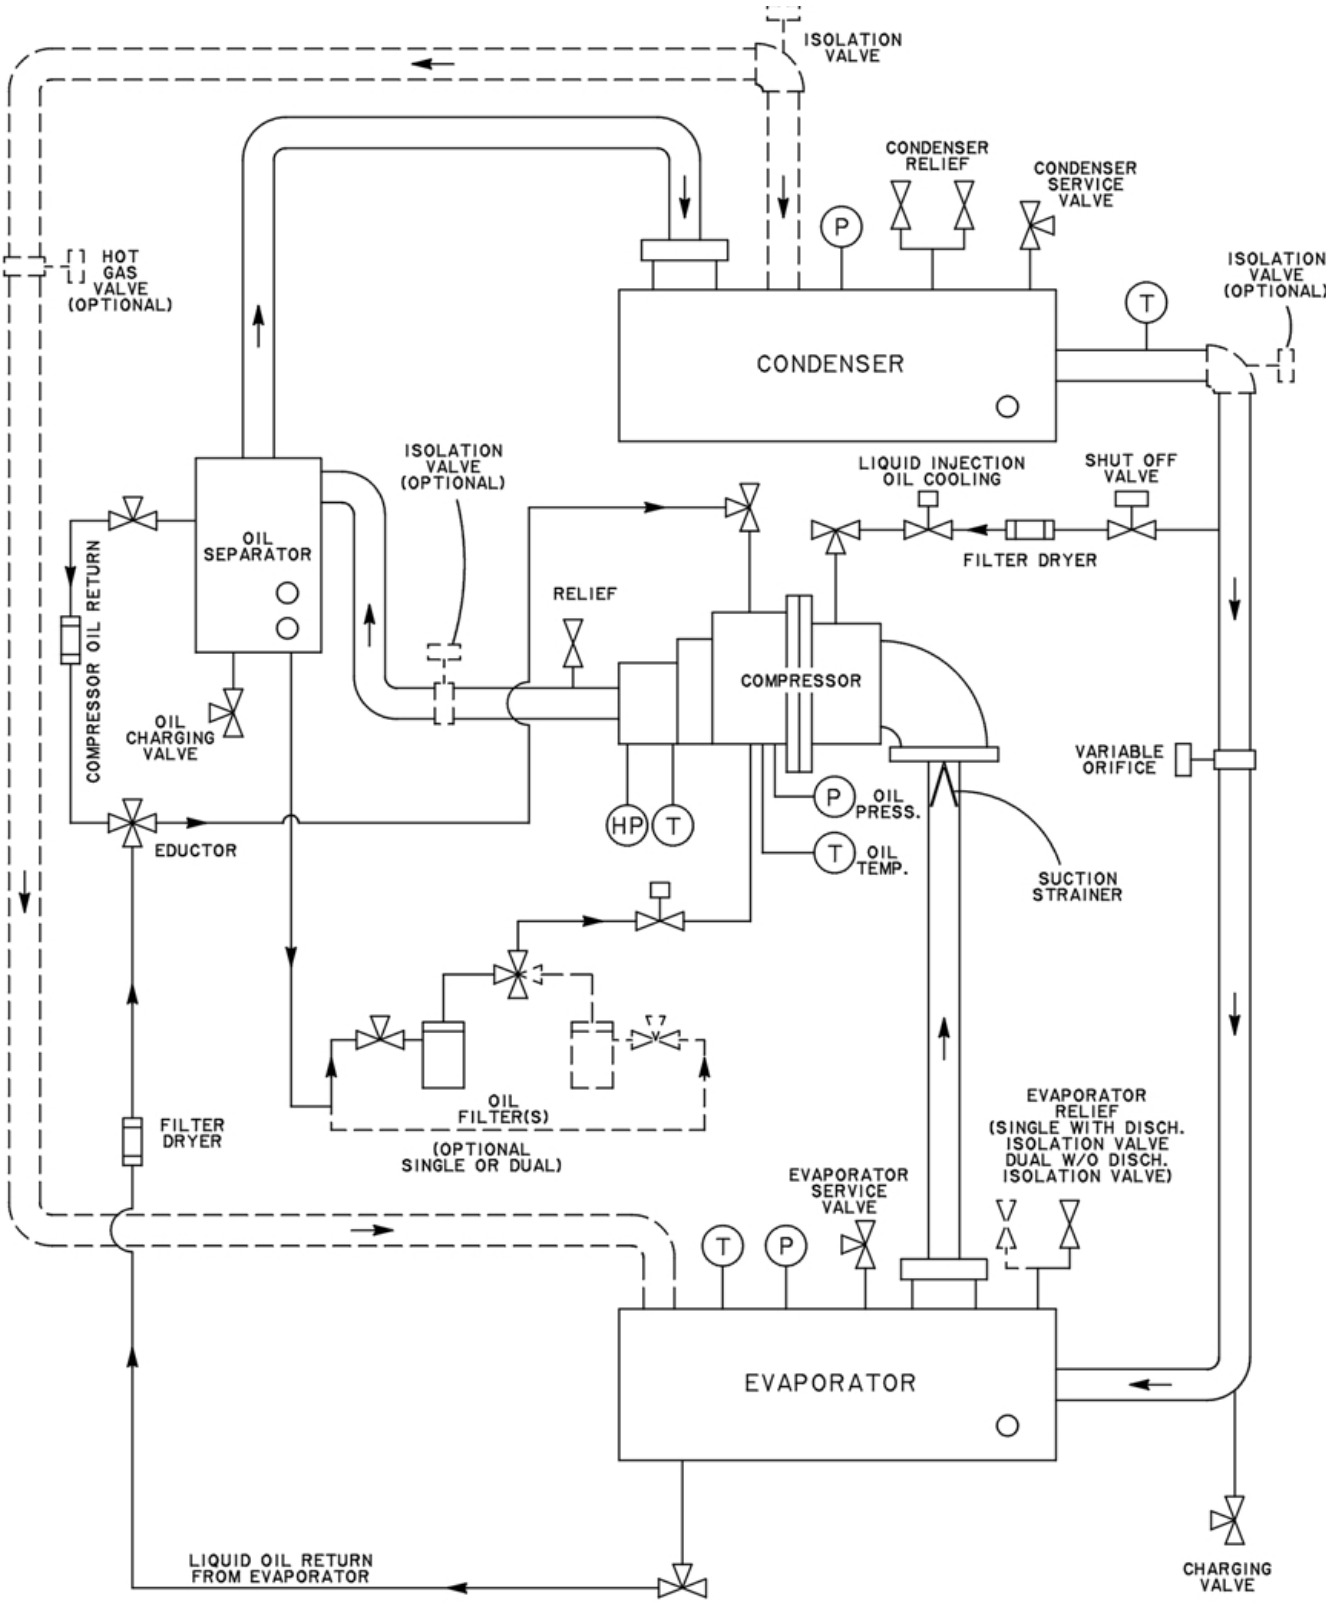

9.5 Water Box Nozzle Arrangements

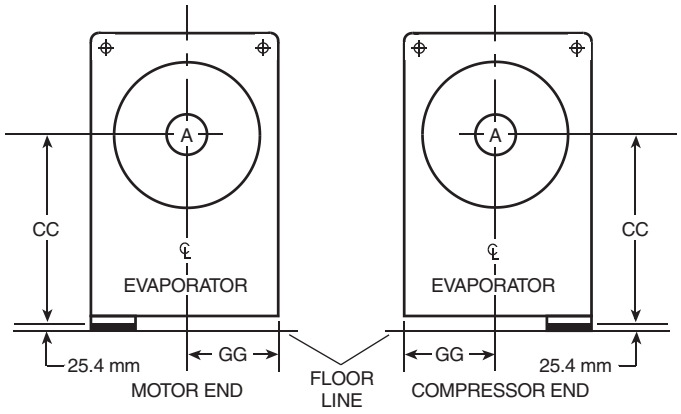

1-PASS Nozzle Arrangements		
No. of Passes	Evaporator	
	In	Out
1	A	H
	H	A

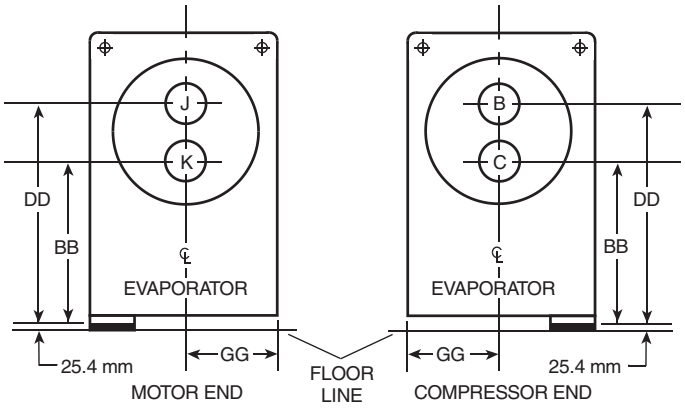

2-PASS Nozzle Arrangements		
No. of Passes	Evaporator	
	In	Out
2	C	B
	K	J

NOTE: Water must enter through bottom connection to achieve rated performance

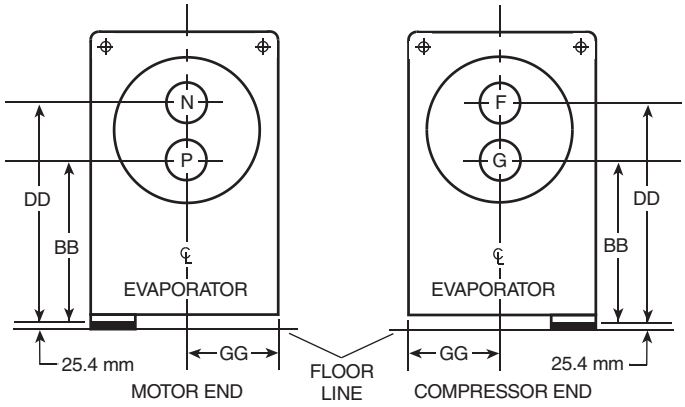

3-PASS Nozzle Arrangements		
No. of Passes	Evaporator	
	In	Out
3	G	N
	P	F

NOTE: Water must enter through bottom connection to achieve rated performance

Evaporator Shell Code	Nozzle Pipe Size			Evaporator Nozzle Dimensions							
	No. of Passes			1-PASS		2-PASS			3-PASS		
	1	2	3	CC[2]	GG	BB[2]	DD[2]	GG	BB[2]	DD	GG
T	8"	6"	4"	578	343	330	775	343	330	775	394
V	8"	6"	4"	578	343	330	775	343	330	775	394

Dimensions in mm

NOTES:

1. Standard water nozzles are furnished as welding stub-outs with Victaulic grooves, allowing the option of welding, flanges, or use of Victaulic couplings. Factory installed, class 150 (ANSI B16.5, round slip-on, forged carbon steel with 1.59mm raised face), water flanged nozzles are optional (add 12.7 mm to nozzle length). Companion flanges, nuts, bolts and gaskets are not furnished.
2. Add 25.4 mm for isolators as shown.
3 One-, two- and three-pass nozzle arrangements are available only in pairs shown and for all shell codes. Any pair of evaporator nozzles may be used in combination with any pair of condenser nozzles.
4. Connected piping should allow for removal of compact water boxes for tube access and cleaning.

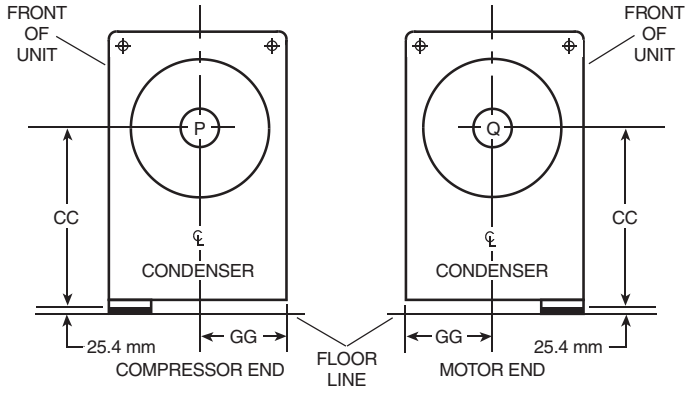

1-PASS Nozzle Arrangements		
No. of Passes	Condenser	
	In	Out
1	P	Q
	Q	P

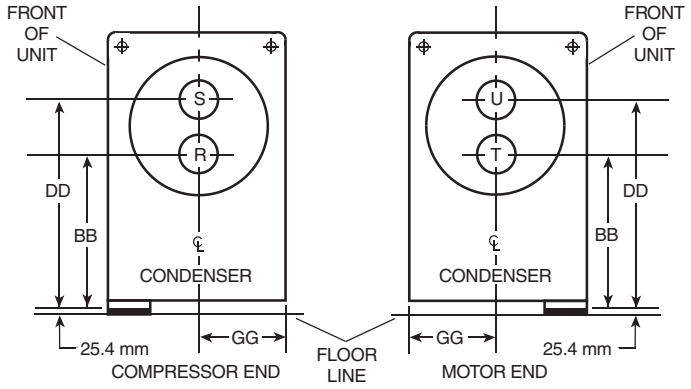

2-PASS Nozzle Arrangements		
No. of Passes	Condenser	
	In	Out
2	R	S
	T	U

NOTE: Water must enter through bottom connection to achieve rated performance

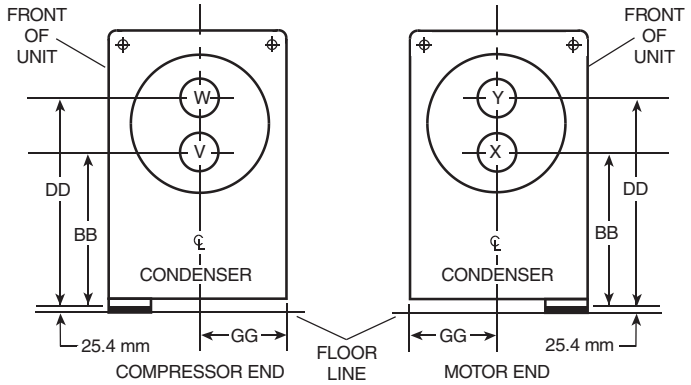

3-PASS Nozzle Arrangements		
No. of Passes	Condenser	
	In	Out
3	V	Y
	X	W

NOTE: Water must enter through bottom connection to achieve rated performance

Condenser Shell Code	Nozzle Pipe Size			Condenser Nozzle Dimensions							
	No. of Passes			1-PASS		2-PASS			3-PASS		
	1	2	3	CC^2	GG	BB^2	DD^2	GG	BB^2	DD	GG
T	10"	6"	6"	730.2	381	552.5	908.1	381	552.5	908.1	381
V	10"	6"	6"	730.2	381	552.5	908.1	381	552.5	908.1	381

Dimensions in mm

NOTES:

1. Standard water nozzles are furnished as welding stub-outs with Victaulic grooves, allowing the option of welding, flanges, or use of Victaulic couplings. Factory installed, class 150 (ANSI B16.5, round slip-on, forged carbon steel with 1.59mm raised face), water flanged nozzles are optional (add 12.7 mm to nozzle length). Companion flanges, nuts, bolts and gaskets are not furnished.
2. Add 25.4 mm for isolators as shown.
3 One-, two- and three-pass nozzle arrangements are available only in pairs shown and for all shell codes. Any pair of evaporator nozzles may be used in combination with any pair of condenser nozzles.
4. Connected piping should allow for removal of compact water boxes for tube access and cleaning.

Page left intentionally blank

10 SPARE PARTS

It is recommended that the following common spare parts are held for preventative of corrective maintenance operations.

Part	Qty.	Part No.
Information Required		

Other spare parts vary depending on the unit model. Contact your local York Sales and Service Centre for information and please quote the unit model number and serial number.

When ordering spare parts, we will require the following information to ensure the correct parts are supplied:

Full unit model number, serial number, application and details of the parts required.

All requests for parts should be made to your local York Sales and Service Centre.

Page left intentionally blank

11 DE-COMMISSIONING, DISMANTLING AND DISPOSAL

Never release refrigerant to the atmosphere when emptying the refrigerating circuits. Suitable retrieval equipment must be used. If reclaimed refrigerant cannot be re-used. It must be returned to the manufacturer.

Never discard used compressor oil, as it contains refrigerant in solution. Return used oil to the oil manufacturer.

Unless otherwise indicated the operations described below can be performed by any properly trained maintenance technician.

11.1 General

Isolate all sources of electrical supply to the unit including any control system supplies switched by the unit. Ensure that all points of isolation are secured in the 'OFF' position. The supply cables may then be disconnected and removed. For connection points refer to Section 4.

Remove all refrigerant from the unit into a suitable container using a refrigerant reclaim or recovery unit. This refrigerant may then be re-used, if appropriate, or returned to the manufacturer for disposal. Under NO circumstances should refrigerant be vented to atmosphere. Drain the oil from the unit into a suitable container and dispose of according to local laws and regulations governing the disposal of oily wastes. Any spilt oil should be mopped up and similarly disposed of.

Isolate the unit heat exchangers from all external water systems and drain the heat exchanger sections of the system. If no isolation valves are installed it may be necessary to drain the complete systems.

If glycol or similar solutions have been used in the water system(s), or Chemical additives are contained, the solution MUST be disposed of in a suitable and safe manner. Under NO circumstances should any system containing glycol or similar solutions be drained directly into domestic waste or natural water systems.

After draining, the water pipework can be disconnected and removed.

Packaged units can generally be removed in one piece after disconnection as above. Any fixing down bolts should be removed and then the unit should be lifted from position using the points provided and equipment of adequate lifting capacity.

Reference should be made to Section 4 for unit installation instructions, Section 9 for unit weights and Section 3 for handling.

Units which cannot be removed in one piece, after disconnection as above, must be dismantled in position. Special care should be taken regarding the weight and handling of each component. Where possible units should be dismantled in the reverse order of installation.

Residual solution, refrigerant, oil and glycol or similar fluids may remain in some parts of the system. These should be mopped up and disposed of as described above.

It is important to ensure that whilst components are being removed the remaining parts are supported in a safe manner.

Only use lifting equipment of adequate capacity.

After removal from position the unit parts may be disposed of according to local laws and regulations.

Page left intentionally blank

Italy
YORK International
20051 Limbiate (Milan)
Via Manara 2
Italia
Tel: ++39/0299450.1
Fax: ++39/0299450.860

Kazakhstan
YORK International
Representation Office
92 Maulenov Str. office 329,327
KZ-480012 Almaty
Kazakhstan
Tel: ++732 72/ 62 97 77
Fax: ++732 72/ 63 37 19

Latvia
YORK Latvia
YORK International S.I.A.
Krustpils iela 1
LV-1073 Riga
Latvia
Tel: ++371/7113068
Fax: ++371/7113067

Lithuania
YORK International GmbH
Representation Office
Fabijoniskiu 96
2029 Vilnius/Lithuania
Tel: ++3702 - 388337,
388339
Fax: ++3702 388112

Nederland
YORK International
Tinstraat 15
Postbus 3453
4800 DL Breda
Nederland
Tel: ++31 765486800
Fax: ++31 765421800

Poland
YORK Polska
YORK INT. Sp.z.o.o.
Al. Slowianska 10
PL-01-695 Warszawa
Poland
Tel: ++4822/83 22 220
Fax: ++4822/8330303

Portugal
Roca/YORK
Estrada Outeiro de Polima
Lote 9 3 A/D
Abübada Cascais
2785 518,
S. Domingos de Rana
Portugal
Tel: ++351 21 445 0601
Fax: ++351 21 445 0598

Romania
YORK Romania
YORK International S.R.L.
6 Londra St.
1 District
RO-712171 Bucharest
Romania
Tel: ++401/2304516/2315319
2315320/2315321
Fax: ++401/2304406

Russia
YORK International ZAO
Poklonnaya, 14a
CIS-121170 Moscow
Russia
Tel: ++7095/232-2075
Fax: ++7095/232-6661

YORK International ZAO
28 Zagorodny prospect
CIS-191002
St. Petersburg
Russia
Tel: ++7812/325 4700
Fax: ++7812/325 4701

YORK International ZAO
Alexeevskaya St. 26, Office 208
N. Novgorod,
CIS
Tel/Fax: ++7 8312/35 19 03

Serbia
YORK International
YU Business Center
Bulevar Lenjina 10/D/I/127
YU-11070 Belgrade
Serbia
Tel: ++381 11 311 41 43
++381 11 311 91 19
Fax: ++381 11 137 694

Slovak Republic
YORK Slovensko
YORK International spol.sr.o.
Pekna cesta 6b
SK-83105 Bratislava
Slovak Republic
Tel/Fax: ++421/7/44880952,
0953, 0954, 0955

South Africa
YORK International
Johannesburg Head Office.
60 B Electron Ave.
Isando. 1600
Johannesburg
Tel: +27 11 921 7100
Fax: +27 11 921 7200

Supremeair (YORK Service)
'43 11th Rd.
Kew
Johannesburg
Tel: +27 11 786 0868
Fax: +27 11 786 0876

YORK International
35 Haulage Rd.
Carletonville 2500
Tel: +27 18 786 1062/3
Fax: +27 18 787 3213

YORK International
2 Cassiafield Grove
Springfield Park 4091
Durban
Tel: +27 31 579 4646
Fax: +27 31 579 1030

YORK International
5 Stepmar Building
27 Stells Rd.
Montague Gardens 7441
Cape Town
Tel: +27 21 551 3012
Fax: +27 21 551 4176

Supremair (YORK Service)
9 Henri van Rooijen St.
Eastend 9300
Bloemfontein
Tel: +27 51 432 7828
Fax: +27 51 432 2450

YORK International
118D Constantia St.
Welkom 9459
Tel: +27 57 352 3240
Fax: +27 57 352 8982

Spain
Roca/YORK
Industria 94-96
08908 Hospitalet de Llobregat
Barcelona
Spain
Tel: ++34 93 422 90 90
Fax: ++34 93 332 16 14

Roca/YORK
Hurtado de Amézaga 20, 4°
48008 Bilbao
Spain
Tel: ++34 944 162 833
Fax: ++34 94 415 49 69

Roca/YORK
Av. Valdelaparra 47
28100 Alcobendas
Madrid
Spain
Tel: ++34 916 624 101
Fax: ++34 91 662 41 57

Roca/YORK
Juventud 8
Parque Ind. PISA
41927 Mairena de Aljarafe
Seville
Spain
Tel: ++34 954 183 012
Fax: ++34 95 418 30 68

Roca/YORK
Senyera s/n
Pol. Ind. Mediterráneo Parc 28 Nave 3
46560 Massalfassar
Valencia
Spain
Tel: ++34 961 400 711
Fax: ++34 96 140 22 53

Switzerland
YORK International
Grindelstrasse 19
CH-8303 Bassersdorf
Switzerland
Tel: ++41/1/83844-11
Fax: ++41/1/8369780

YORK International
4, Chemin des l'Esparcette
CH-1023 Crissier
Switzerland
Tel: ++41/21/6328011
Fax: ++41/21/6328013

Ukraine
YORK Ukraine
YORK International GmbH
36, Degterevskaya street
floor 7, room 723-725
Kiev/Ukraine
Tel: ++38044/219 32 89,
461 91 77, 211 09 91
Fax: ++38044/213 36 95

United Kingdom
York International
72 Buckingham Avenue
Slough
Berkshire
SL1 4PN
England
Tel: ++44 1753 693919
Fax: ++44 1753 692405

York International
14-16 St Martins Avenue
Fieldhead Business Centre
Bradford
BD7 1LG
England
Tel: ++44 1274 765300
Fax: ++44 1274 765301

York International
Unit 17
Garanor Way
Royal Portbury
Bristol
BS920 7XE
England
Tel: ++44 1275 375713
Fax: ++44 1275 375714

York International
Unit 5
Swift Business Centre
Keen Road
Cardiff
CF1 5JR
Wales
Tel: ++44 292 0470619
Fax: ++44 292 0470624

York International
Unit 4
Zealley Estate
Greenhill Way
Kingsteignton
Newton Abbott
Devon
England
TQ12 3TD
Tel: ++44 1626 333734
Fax: ++44 1626 335220

York International
Gardiners Lane South
Basildon
Essex
SS14 3HE
England
Tel: ++44 1268 246000
Fax: ++44 1268 246001

York International
Unit 10
Hadrians Court
Seventh Avenue
Team Valley Trading Estate
Gateshead
Tyne & Wear NE11 0XW
England
Tel: ++44 (0) 191 491 0598
Fax: ++44 (0) 191 482 6167

York International
1 Donaldson Crescent,
Southbank Business Park
Kirkintillock
Glasgow
G66 1XF
Scotland
Tel: ++44 (0) 141 776 7576
Fax: ++44 (0) 141 777 7425

York International
Unit 1
Western Access
Guinness Road
Trafford Park
Manchester M17 1SY
England
Tel: ++44 (0) 161 848 0202
Fax: ++44 (0) 161 848 7196

York International
Unit 25
Portsmouth Enterprise Centre
Quartremaine Road
The Airport
Portsmouth
PO3 5QT
England
Tel: ++44 2392 650149
Fax: ++44 2392 650225

York International
Arden House
Marsh Lane
Hampton-In-Arden
Solihull
West Midlands
B92 0AJ
England
Tel: ++44 1675 443341
Fax: ++44 1675 442402

Uzbekistan
YORK International
Representation Office
C4, Place 35
UZ - 700017 Tashkent
Uzbekistan
Tel: ++998 71 137 5770
++998 71 137 5062
Fax: ++998 71 137 5055

European Parts Centre
Gardiners Lane South
Basildon
Essex
SS14 3HE
England
Tel: ++44 1268 246000
Fax: ++44 1268 246001

YORK Service and Parts Contact Addresses

Austria
YORK Austria
Central & Eastern Europe Headquarters
Zetschegasse 3
A 1232 Wien
Austria
Tel: ++43 1 66 136 195
Fax: ++43 1 66 136 86

Azerbaijan
YORK International AO
90 M. Mansurov Str.
AZ-370004 Baku
Republic of Azerbaijan
Tel.: ++99 412/ 97 10 35
Fax: ++99 412/ 97 10 36

Belarus
YORK International AO
Leningradskaya str, 18
Minsk
Belarus
Tel/Fax: ++375/172/06 63 80
Tel/Fax: ++375/172/10 43 35

Belgium
YORK International
Prins Boudewijnlaan 1
2550 Kontich
Belgium
Tel: ++32 34510600
Fax:++32 34582444

Bulgaria
YORK Bulgaria
YORK International EOOD
10, Marko Balabanov Str.
BG-1303 Sofia
Bulgaria
Tel: ++3592/9803040,
9815780, 9817578
Fax: ++3592/9818386

Croatia
YORK International
Vrlicka 24
HR-10000 Zagreb
Croatia
Tel.: ++385/1/3843 444
++385/1/3843 851
++385/1/3840 352
Fax: ++385/1/3840 398

Czech Republic
YORK Ceska Republika
YORK International spol. sr.o.
Edisonova 27
CZ-10900 Praha 10 -Petrovice
Tel: ++420/2/721 21 111
Fax: ++420/2/721 21 100

France
YORK International
Innolac n°7
Rue du Professeur G.Jeanneney
33300 Bordeaux
France
Tel: ++33 5.57.19.06.30
Fax: ++33 5.56.69.04.96

YORK International
14 rue de Bel Air
B.P.309
44473 Carquefou Cedex
France
Tel: ++33 2.40.30.62.93
Fax: ++33 2.40.30.22.66

YORK International
114-126 Avenue d'Alfortville
94607 Choisy-le-Roi Cedex
France
Tel: ++33 1.45.12.10.30
Fax: ++33 1.48.52.59.34

YORK International
31 rue Wilson
69150 Decines- Charpieu
France
Tel: ++33 4.72.02.62.50
Fax: ++33 4.72.05.30.01

YORK International
15 rue des Combattants d'Extrême Orient
13700 Marignane
France
Tel: ++33 4.42.77.04.60
Fax: ++33 4.42.15.08.99

YORK International
Rue A.Fruchard - Z.I. Jean Prouvé
54320 Maxeville
France
Tel: ++33 3.83.32.49.83
Fax: ++33 3.83.32.43.16

YORK International
14 rue de Constantine
62200 Boulogne Sur-Mer
France
Tel: ++33 3.21.83.17.70
Fax: ++33 3.21.83.11.02

YORK International
102 Bd de Strasbourg
49300 Cholet
France
Tel: ++33 2.41.29.13.73
Fax: ++33 2.41.29.13.80

YORK International
3 rue du Moros
29900 Concarneau
France
Tel: ++33 2.98.60.52.10
Fax: ++33 2.98.60.52.11

YORK International
Parc du Talou - 7 rue A.Legras
76200 Dieppe
France
Tel: ++33 2.32.14.41.50
Fax: ++33 2.32.14.41.51

YORK International
44 rue Gambetta
17260 Gemozac
France
Tel: ++33 5.46.95.87.80
Fax: ++33 5.46.94.56.41

YORK International
Z.I. du Vern
29230 Landivisiau
France
Tel: ++33 2.98.68.21.52
Fax: ++33 2.98.68.90.91

YORK International
4 rue du Grand Fief
85150 Vaire
France
Tel: ++33 2.51.33.70.83
Fax: ++33 2.51.33.70.85

YORK International
6 Bis rue Chalutier-La-Tanche
56100 Lorient
France
Tel: ++33 3.20.87.61.62
Fax: ++33 2.97.83.83.80

YORK International
Rue de la Longuerais
ZA des Landelles
35520 Melesse
France
Tel: ++33 2.99.66.01.87
Fax: ++33 2.99.66.92.73

YORK International
78 Avenue de Laon
02200 Soissons
France
Tel: ++33 3.23.59.65.55
Fax: ++33 3.23.59.65.56

YORK International
8 rue de l'Artisanat
67120 Dupigheim
France
Tel: ++33 3.88.48.22.50
Fax: ++33 3.88.48.22.51

YORK International
Z.A. du Prieuré
37530 Poce Sur Cisse
France
Tel: ++33 2.47.23.29.23
Fax: ++33 2.47.23.25.50

YORK International
Avenue Lavoisier
Z.I. de Villemilan
91320 Wissous
France
Tel: ++33 1.60.11.88.76
Fax: ++33 1.60.11.90.16

Germany
YORK International
Paradiesstraße 210
12526 Berlin
Germany
Tel: ++49/30/6797190
Fax: ++49/30/67971944

YORK International
Hafenstraße 100
45356 Essen
Germany
Tel: ++49/201/364000
Fax: ++49/201/3640041

YORK International
Wächtersbacher Straße 83
60386 Frankfurt
Germany
Tel: ++49/69/941402-0
Fax: ++49/69/94140244

YORK International
Sperberhorst 8
22459 Hamburg
Germany
Tel: ++49/40/5714410
Fax: ++49/40/57144133

YORK International
Alter Flughafen 18a
30179 Hannover
Germany
Tel: ++49/511/678040
Fax: ++49/511/6780433

YORK International
Leipziger Straße 35 37
34125 Kassel
Germany
Tel: ++49/561/507210
Fax: ++49/561/5072122

YORK International
Widdersdorfer Straße 215
50825 Köln
Germany
Tel: ++49/221/498750
Fax: ++49/221/4987539

YORK International
Fuggerstraße 1
04448 Leipzig
Germany
Tel: ++49/341/566630
Fax: ++49/341/5666333

YORK International
Gottlieb-Daimler-Strasse 6
68165 Mannheim
Germany
Tel: ++49/621/468-532
Fax: ++49/621/468-680

YORK International
Geisenhausener Straße 6
81379 München
Germany
Tel: ++49/89/78048-
Fax: ++49/89/7804844

YORK International
Edisonstraße 60
90431 Nürnberg
Germany
Tel: ++49/911/961750
Fax: ++49/911/9617544

YORK International
Mainzer Straße 29
66111 Saarbrücken
Germany
Tel: ++49/681/67494
Fax: ++49/681/66243

YORK International
Fabrikstraße 17
70794 Filderstadt
Germany
Tel: ++49/711/7709422
Fax: ++49/711/7709433

Greece
YORK International
62 , Kifisias Ave
zip code: 115 26
Athens - Greece
Tel: ++301- 69 11 888
Fax:++301- 69 10 764

Hungary
YORK Magyaroszag
YORK International Kft.
Váci út 206
H-1138 Budapest
Hungary
Tel: ++361/4657060
Fax: ++361/4657069

Ireland
YORK ACR Ltd
Unit 2004/3
City West Business Campus
Naas Road
Dublin 22
Ireland
Tel: ++ 353 1466 0177
Fax: ++ 353 1466 0198

York International
Unit 19
Sarsfield Road
University Hale Industrial Estate
Wilton
Cork
Ireland
Tel: ++353 2 134 6580

YORK® Europe

YORK INTERNATIONAL

YORK INTERNATIONAL
Z.I. 14 rue de Bel Air, B.P.44473 Carquefou, Cedex, France

Part No. 160.81-ICOM-GB0 (01/02)

Subject to change without notice
ALL RIGHTS RESERVED